



15", 19", 22" LCD TV

**DX-15L150A11**

**DX-19L150A11**

**DX-22L150A11**

# Dynex 15", 19", and 22" LCD TVs

## Contents

CHILD SAFETY .....	1
Important safety instructions .....	2
Warnings .....	2
Cautions .....	2
Installing and removing the stand .....	4
Installing the stand .....	4
Installing a wall-mount bracket .....	4
TV components .....	5
Accessories .....	5
Front .....	5
Back .....	6
Side .....	6
Remote control .....	7
Using the remote control .....	8
Installing remote control batteries .....	8
Aiming the remote control .....	8
Programming a universal remote control to work with your TV .....	8
Making connections .....	9
Selecting a location .....	9
Connecting the power .....	9
Connecting an HDMI device .....	9
Connecting a component video device .....	9
Connecting an antenna, cable TV, or satellite TV box via coax .....	10
Connecting a VCR .....	10
Connecting a camcorder or game console .....	11
Connecting a computer .....	11
Connecting a home theater system .....	12
Connecting headphones .....	12
Turning on your TV for the first time .....	12
Understanding the basics .....	13
Turning your TV on or off .....	13
Selecting the video input source .....	13
Selecting a channel .....	13
Adjusting the volume .....	13
Displaying program information .....	14
On-screen menu overview .....	14
Navigating the menus .....	14
Adjusting basic settings .....	15
Adjusting the picture .....	15
Adjusting the TV picture .....	15
Adjusting the computer image .....	16
Setting the component image .....	16
Adjusting the sound .....	17
Adjusting the sound .....	17
Playing TV audio only .....	17
Changing channel settings .....	18
Automatically scanning for channels .....	18
Hiding and adding channels .....	18

Setting up a favorite channel list .....	19
Displaying the TV Channels List .....	19
Adding or changing a channel label .....	19
Checking digital TV signal strength .....	20
Setting parental controls .....	20
Setting or changing the password .....	20
Setting parental control levels .....	21
Using closed captioning .....	24
Turning closed captioning on or off .....	24
Selecting the closed captioning mode .....	24
Customizing digital TV closed captioning styles .....	24
Adjusting time settings .....	25
Setting the clock .....	25
Setting the sleep timer .....	26
Adjusting menu settings .....	26
Selecting the menu language and transparency .....	26
Labeling an input source .....	27
Restoring default settings .....	27
Troubleshooting .....	28
Video and audio .....	28
Remote control .....	28
General .....	29
Maintenance .....	29
Cleaning the TV cabinet .....	29
Cleaning the TV screen .....	29
Specifications .....	29
Legal notices .....	29
One-year limited warranty .....	31
US and Canada Markets .....	31
Mexico Market .....	31

## CHILD SAFETY

**It makes a difference how and where you use your flat panel display**

**As you enjoy your new product, keep these safety tips in mind**

### *The issue*

The home theater entertainment experience is a growing trend, and larger TVs are popular purchases. However, TVs are not always supported on the proper stands or installed according to the manufacturer's recommendations. We and the consumer electronics industry are committed to making home entertainment enjoyable and safe.

TVs that are inappropriately placed on dressers, bookcases, shelves, desks, speakers, chests, or carts may fall over and cause injury.

### *Tune into safety*

- One size of TV stand does **not** fit all. Use only a TV stand rated for the weight of your TV.
- Carefully read and understand all enclosed instructions for proper use of this product.
- Don't let children climb on or play with entertainment system furniture and TVs.
- Don't place TVs on furniture that can easily be used as steps, such as a crate or chest of drawers.
- Remember that children can become excited while watching a program, especially on a "larger-than-life" TV. Make sure that you place or install the TV where it cannot be pushed, pulled over, or knocked down.
- Make sure that you route all cords and cables so that they cannot be pulled or grabbed by curious children.



### *Wall mounting*


If you decide to wall mount your TV, always remember:

- One size of wall mount does **not** fit all. Use only a wall mount rated for the weight of your TV and that has been recommended by this TV manufacturer, listed in this manual, or otherwise listed by an independent laboratory as suitable for your TV.
- Follow all instructions supplied by the TV and wall mount manufacturers.
- If you have any doubts about your ability to safely wall mount your TV, get help from a professional installer.
- Make sure that the wall where you are mounting the TV is appropriate. Some wall mounts are not designed to be mounted to walls backed with steel studs or cinder blocks. If you are unsure, ask a professional installer.
- TVs can be heavy. At least two people are required for safe wall mount installation.





## Important safety instructions

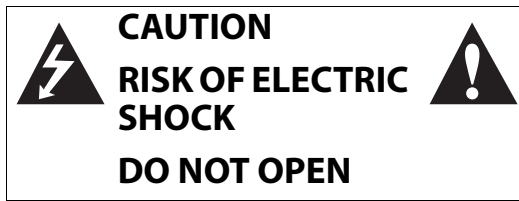

This symbol indicates that dangerous voltage constituting a risk of electric shock is present within your TV. This label is located on the back of your TV.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying your TV.

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with a dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15 The wall plug is the disconnecting device. The plug must remain readily operable.
- 16 An apparatus with a three-prong, grounding-type plug is a Class I apparatus, which needs to be grounded to prevent possible electric shock. Make sure that you connect this Class I television to a grounding-type, three-prong outlet.
- 17 Remote control batteries should not be exposed to excessive heat such as sunshine, fire, or the like.



- 18 The apparatus should not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, should be placed on the apparatus.

## Warnings

### Electric shock hazard

To reduce the risk of fire or electric shock, do not remove any cover or expose the device to rain or moisture. No user-serviceable parts are inside. Refer servicing to qualified service technicians.

### Lightning

For added protection for your device receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the power outlet and disconnect any antenna or cable system. This helps prevent property damage and personal injury from lightning and power line surges.

### Power lines

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

### Handling the LCD panel

- Your TV's screen is made of glass. Do not drop your TV or hit, jolt, or press hard against the LCD panel. If the screen breaks, be careful of broken glass.
- If the LCD panel is broken, make absolutely sure that you do not touch the liquid in the panel. This may cause skin inflammation.
- If the liquid gets in your mouth, immediately gargle, rinse, and consult with your doctor. Also, if the liquid gets in your eyes or touches your skin, consult with your doctor after rinsing for at least 15 minutes or longer in clean water.

### Replacement parts

When replacement parts are required, make sure that the service technician uses replacement parts specified by the manufacturer that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, personal injury, or other hazards.

### Safety check

After completing any service or repair to this device, ask the service technician to perform routine safety checks to determine that your TV is in correct operating condition.

### Power source

Operate your TV only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home, consult an electrician or your local power company.

## Cautions

### Damage requiring service


Unplug this TV from the power outlet and refer servicing to qualified service personnel under the following conditions:

- When the power supply cord or plug is damaged or frayed.
- If liquid has been spilled or objects have fallen into your TV.
- If your TV has been exposed to rain or water.

- If your TV does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions because incorrect adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore your TV to its normal operation.
- If your TV has been dropped or damaged in any way.
- When your TV exhibits a distinct change in performance.

**Outdoor antenna grounding**

If an outside antenna or cable system is connected to your TV, make sure that the antenna or cable system is grounded to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA No. 70, provides information with respect to correct grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of the antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

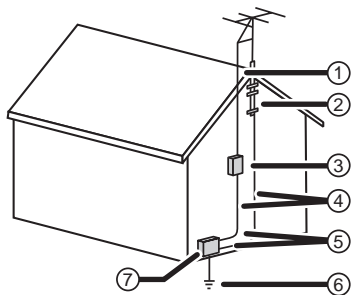

①	Antenna lead-in wire
②	Grounding clamp
③	Antenna discharge unit
④	Grounding conductors
⑤	Ground clamps
⑥	Power service grounding electrode system
⑦	Electric service equipment

**Note to CATV system installer**

Article 820 of the National Electrical Code, ANSI/NFPA No. 40 provides guidance for correct grounding. Specifically, it states that the cable ground must be connected to the grounding system of the building as close to the point of cable entry as practical.

**Condensation**

Moisture will form on the TV if the TV is brought from cool surroundings into a warm room or if the temperature of the room rises suddenly. When this happens, the TV's performance may be impaired. To prevent this, let the TV stand in its new surroundings for about an hour before switching it on, or make sure that the room temperature rises gradually. Condensation may also form during the summer if the TV is exposed to the breeze from an air conditioner. In such cases, change the location of the TV.

**Mobile telephone warning**

To avoid interference with your TV picture and sound, operating problems, or even damage, keep your cordless and cellular telephones away from the TV.

**End of life directives**

Your TV contains tin-lead solder and a fluorescent lamp containing a small amount of mercury. Disposal of these materials may be regulated for environmental reasons. Your TV also contains material that can be recycled and reused. For disposal or recycling information, contact your local authorities or the Electronic Industries Alliance at [www.eia.org](http://www.eia.org) to find a recycler in your area.

**Non-active pixels**

The LCD panel contains almost 3 million thin film transistors, which provide exceptionally sharp video quality. Occasionally, a few non-active pixels may appear on the screen as a fixed blue, green, or red point. These non-active pixels do not adversely affect the performance of your TV, and are not considered defects.

## Installing and removing the stand

You must install your TV into the stand in order for it to stand upright on a cabinet or other flat surface. If you intend to mount your TV on a wall or other vertical surface, you must remove the stand column.

### Cautions


- Read these instructions carefully before you try to assemble the stand or remove the stand column.
- Make sure that you handle the TV carefully when attempting to assemble or remove the stand. If you are not sure of your ability to do this, contact a professional installer or service technician. Dynex is not responsible for any damages or injuries that occur because of mishandling or incorrect assembly.
- Use a soft cushion or covering to prevent scratching or damage to the TV screen or cabinet.
- Before assembly or removal of the stand, unplug the power cord.

## Installing the stand

**Note:** Your TV may differ from the illustrations shown.

### To install the stand:

- 1 Lay the TV on a flat, cushioned surface.
- 2 Align the stand with the TV, as shown in the following illustration.

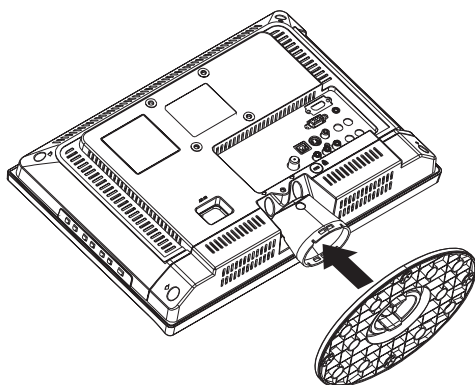



- 3 Carefully align and insert the base into the stand until the locking mechanism clicks into place.

## Installing a wall-mount bracket


**Warning:** These instructions are for use by qualified service personnel only. To reduce the risk of hazards, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

### To install a wall-mount bracket:

- 1 Lay your TV on a flat, cushioned surface.
- 2 Remove the three screws holding the stand column to the TV, then remove the stand column.

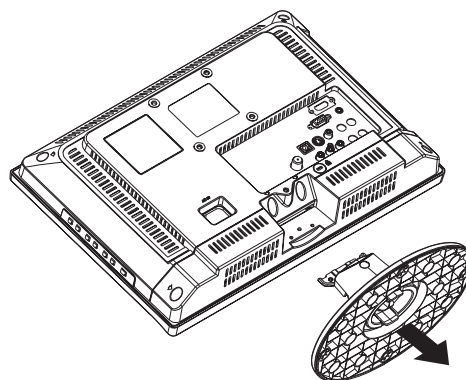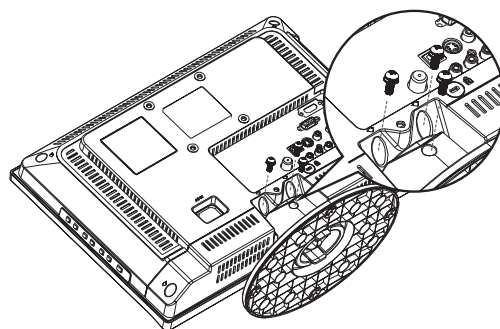


- 3 Insert and lock the standoff screws (provided) into the four holes on the back of your TV, as shown in the following illustration.

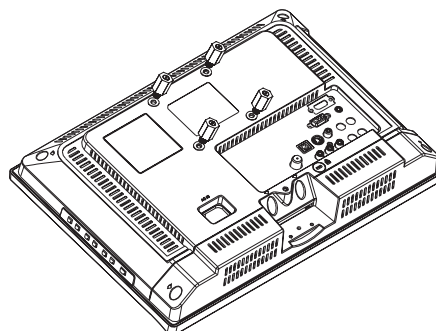


- 4 Secure the wall-mount bracket to the back of your TV by screwing four M4 screws (not provided) into the standoff screws you just installed.

For 15" TV only

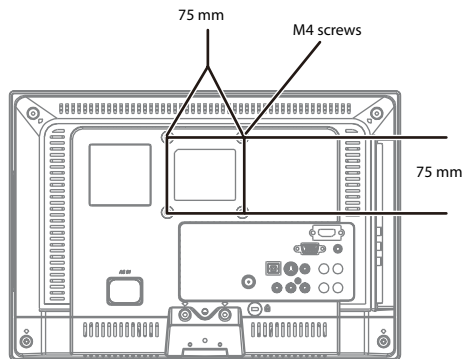

For 19" and 22" TVs only

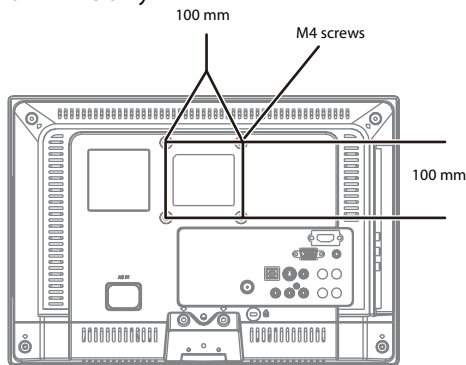


TV components

Accessories

Make sure the following accessories are included in the box with your TV:


- Remote control
- Component video cable and audio cable L and R
- AC power cord
- AAA batteries (2)
- Stand
- Quick Start Guide
- Standoff screws (4) for wall mounting

Front

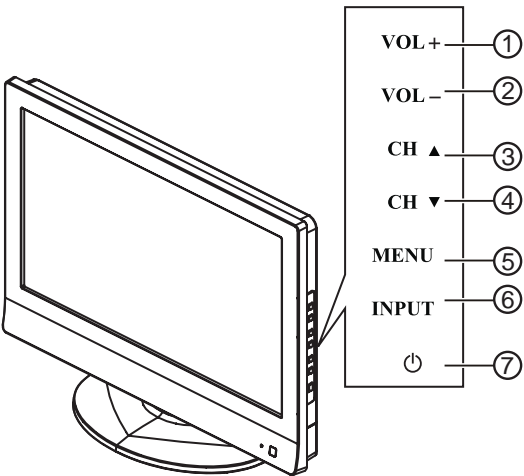


Item	Name	Description
①	VOL +	In TV mode, press to increase the volume. In menu mode, press to move right or to adjust menu settings.
②	VOL -	In TV mode, press to decrease the volume. In menu mode, press to move left or to adjust menu settings.
③	CH ▲	In TV mode, press to select the next channel. In menu mode, press to move up.
④	CH ▼	In TV mode, press to select the previous channel. In menu mode, press to move down.
⑤	MENU	Press to open the on-screen menu.
⑥	INPUT	Press to open the <b>INPUT SOURCE</b> menu. For more information, see "Selecting the video input source" on page 13.
⑦	⏻ (power)	Press to turn on the TV or put the TV in standby mode. <b>Caution:</b> The TV continues to receive power even in standby mode. Unplug the power cord to disconnect power.

## Back

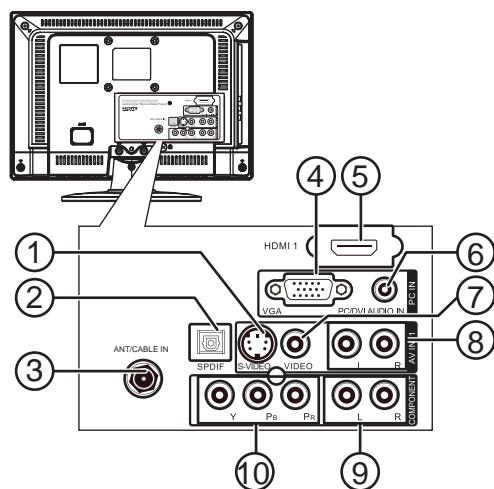


Item	Name	Description
①	<b>AV IN 1 S-VIDEO</b> jack	Connect an S-Video device to this jack. For more information, see "Connecting a VCR" on page 10 for an example of the connection.
②	<b>SPDIF</b>	Connect a digital optical cable to this connector, then to a digital sound system. For more information, see "Connecting using digital audio cable" on page 12.
③	<b>ANT/CABLE IN</b> jack	Connect an antenna or cable TV to this jack. For more information, see "Connecting an antenna, cable TV, or satellite TV box via coax" on page 10.
④	<b>PC IN VGA</b> connection	Connect a computer to this connector. For more information, see "Connecting a computer" on page 11.
⑤	<b>HDMI</b> jack	Connect an HDMI device to this jack. For more information, see "Connecting a computer" on page 11.
⑥	<b>PC/DVI AUDIO IN</b> jack	Connect the audio output from a computer to this jack. For more information, see "Connecting a computer" on page 11.
⑦	<b>AV1 IN VIDEO</b> jack	Connect the video from a standard AV device, such as a camcorder or game console, to this jack. For more information, see "Connecting a camcorder or game console" on page 11.
⑧	<b>AV1 IN AUDIO L and R</b> jacks	Connect the audio from a standard AV device, such as a camcorder or game console, to these jacks. For more information, see "Connecting a camcorder or game console" on page 11.
⑨	<b>COMPONENT AUDIO IN</b> jacks	Connect the audio from a component video device to these jacks. For more information, see "Connecting a component video device" on page 9.
⑩	<b>COMPONENT Y/Pb/Pr</b> jacks	Connect the video from a component video device to these jacks. For more information, see "Connecting a component video device" on page 9.

## Side

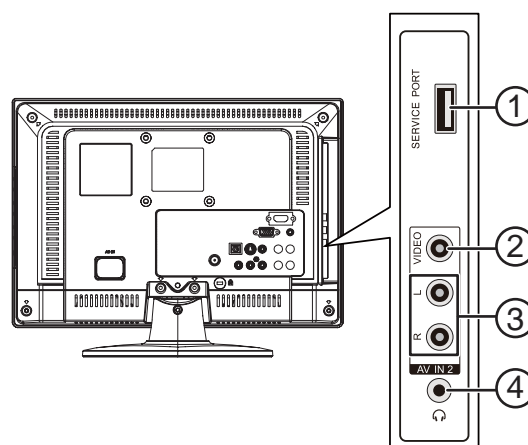

Item	Name	Description
①	<b>SERVICE PORT</b>	For software updates only. Do not use.
②	<b>AV2 IN VIDEO</b> jack	Connect the video from a standard AV device, such as a camcorder or game console, to this jack. For more information, see "Connecting a camcorder or game console" on page 11.
③	<b>AV2 IN AUDIO L and R</b> jacks	Connect the audio from a standard AV device, such as a camcorder or game console, to these jacks. For more information, see "Connecting a camcorder or game console" on page 11.
④	🎧 (headphone) jack	Plug headphones into this jack. For more information, see "Connecting headphones" on page 12.

## Remote control

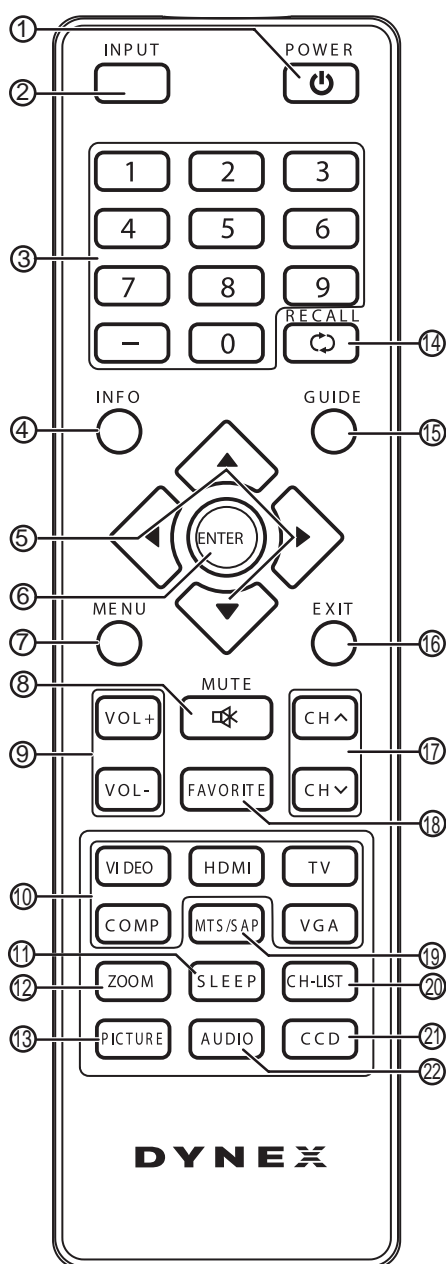

Item	Name	Description
①	<b>POWER</b>	Press to turn on the TV or put the TV in standby mode. <b>Caution:</b> The TV continues to receive power even in standby mode. Unplug the power cord to disconnect power.
②	<b>INPUT</b>	Press to open the <b>INPUT SOURCE</b> menu. For more information, see "Selecting the video input source" on page 13.
③	Numbers/-	Press the number buttons to enter channel numbers or the parental control password. Press "-" to enter a digital sub-channel number. For more information, see "Selecting a channel" on page 13.
④	<b>INFO</b>	Press to display the information banner. For more information, see "Displaying program information" on page 14.

Item	Name	Description
⑤		Press  or  to move up or down in on-screen menus. Press  or  to move left or right in on-screen menus or to adjust menu settings.
⑥	<b>ENTER</b>	Press to confirm selections in on-screen menus or to open sub-menus.
⑦	<b>MENU</b>	Press to open the on-screen menu.
⑧	<b>MUTE</b>	Press to mute the sound. Press again to restore the sound.
⑨	<b>VOL+ / VOL-</b>	Press to increase or decrease the volume.
⑩	<b>COMP/HDMI/VIDEO/TV/VGA</b>	Press to select the input source: <ul style="list-style-type: none"> <li>Press <b>COMP</b> to select component input.</li> <li>Press <b>HDMI</b> repeatedly to cycle between the HDMI input.</li> <li>Press <b>VIDEO</b> repeatedly to cycle between the AV and S-Video inputs.</li> <li>Press <b>TV</b> to switch to TV mode.</li> <li>Press <b>VGA</b> to view a computer connected to the TV.</li> </ul>
⑪	<b>SLEEP</b>	Press to set the sleep timer. For more information, see "Setting the sleep timer" on page 26.
⑫	<b>ZOOM</b>	Press to select the screen aspect ratio. You can select <b>Auto</b> , <b>Normal</b> , <b>Zoom</b> , <b>Wide</b> , and <b>Cinema</b> . For more information, see "Adjusting the TV picture" on page 15.
⑬	<b>PICTURE</b>	Press to select the picture mode. You can select <b>Vivid</b> , <b>Standard</b> , <b>Theater</b> , <b>Sports</b> , <b>Energy Saving</b> , and <b>Custom</b> . For more information, see "Adjusting the TV picture" on page 15.
⑭	<b>RECALL</b>	Press to go to the last viewed channel. For more information, see "Selecting a channel" on page 13.
⑮	<b>GUIDE</b>	Press to open the DTV program guide (if available). For more information, see "Displaying program information" on page 14.
⑯	<b>EXIT</b>	Press to close the on-screen menu.
⑰	<b>CH ^ / CH v</b>	Press to go to the next or previous channel in the channel list. For more information, see "Automatically scanning for channels" on page 18 and "Selecting a channel" on page 13.
⑱	<b>FAVORITE</b>	Press to open the favorite channel list. For more information, see "Setting up a favorite channel list" on page 19.
⑲	<b>MTS/SAP</b>	In analog TV mode, press to select <b>STEREO</b> , <b>SAP</b> (secondary audio language), or <b>MONO</b> . In digital TV mode, press to select the audio track (language). For more information, see "Adjusting the sound" on page 17.
⑳	<b>CH-LIST</b>	Press to open the channel list. For more information see "Selecting a channel" on page 13.
㉑	<b>CCD</b>	Press to turn closed captioning on or off. For more information, see "Turning closed captioning on or off" on page 24.
㉒	<b>AUDIO</b>	Press to select the audio mode. You can select <b>Standard</b> , <b>Theater</b> , <b>Music</b> , <b>News</b> , or <b>Custom</b> when the Equalizer option is turned <b>On</b> . For more information, see "Adjusting the sound" on page 17.




## Using the remote control

### Installing remote control batteries

#### To install remote control batteries:

- 1 Press down on the battery compartment cover lock, then remove the remote control cover.

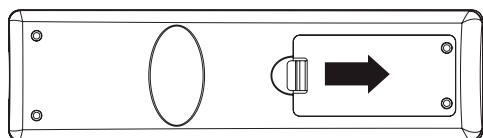

- 2 Insert two AAA batteries into the battery compartment. Make sure that the + and – symbols on the batteries match the + and – symbols in the battery compartment.
- 3 Replace the cover. Make sure that the lock snaps into place.

#### Battery precautions:

- Dispose of batteries as hazardous waste.
- Do not mix batteries of different types.
- Do not mix old and new batteries. Mixing old and new batteries can shorten the life of new batteries and can cause old batteries to leak.
- Remove batteries as soon as they become inoperable. Chemicals that can leak from the batteries can cause a rash. If the batteries leak, clean the battery compartment with a cloth.
- If the remote control is not used for an extended period of time, remove the batteries.
- Do not expose batteries to excessive heat such as sunshine, fire, or other heat sources.

### Aiming the remote control

#### To aim the remote control:

- Point the remote control towards the remote sensor on the front of your TV.

#### Notes:

- Do not expose the remote control to shock or liquids.
- Do not use the remote control in an area with high humidity.
- Do not place the remote control in direct sunlight.
- Do not place objects, such as furniture, between the remote control and the remote sensor.
- The remote control may not work if direct sunlight or bright light shines on the remote sensor. Either move your TV or change the angle at which you use the remote control.

### Programming a universal remote control to work with your TV

You can program a universal remote to control your TV.

#### To program your existing universal remote control:

- 1 To program your existing remote control to work with your Dynex TV, see the table below for common codes. If you have problems programming your remote, or need a different remote control code, visit [www.dynexproducts.com](http://www.dynexproducts.com) for the latest remote control code information.

#### Dynex TV codes for universal remote controls (for all Dynex TVs manufactured after Jan. 1, 2007)

Universal remote control manufacturer and model				
Philips PHDVD5, PH5DSS, PMDVR8, PDVR8	RCA RCU807	One for All URC-6690	Sony RM-VL600	
<b>115</b>	<b>135</b>	<b>0464</b>	<b>8043</b>	

Set-top box manufacturer and model				
Comcast M1057	Dish Network VIP508, VIP622	Motorola DRC800	TIVO Series 3, HD	DirectTV RC23
<b>0463</b>	<b>720</b>	<b>0463</b>	<b>0091</b>	<b>10463</b>

Codes for other remote controls are available online at:  
<http://www.dynexproducts.com/universalcontrolcodes.aspx>

#### Tips:

- The brand name is often visible on the front of the universal remote control, and the model number is often visible on the back.
- The codes shown above are common codes, but are subject to change. Please refer to [Dynexproducts.com](http://Dynexproducts.com) for the most up to date codes.
- If your universal remote control isn't listed on the chart, refer to your universal remote control's instructions and try codes for the brands Orion, Emerson, Memorex, Sansui, Sylvania, or Zenith. You may need to try several codes before finding a match.

- 2 Follow your universal remote control's instructions to enter the code you found in Step 1.

#### Tips:

- If your universal remote control has a code search feature, run a code search to identify a code that matches your TV. See your universal remote control's instructions for details.
- If your universal remote control has a "learn" feature, you can manually program it using your TV remote to "teach" the commands one at a time. See your universal remote control's instructions for details.

- 3 If all else fails, you must use a different universal remote control that can operate both your set-top box and your TV. Five such remotes are listed on the chart, but many other compatible models are available in the market.

For more help, call technical support for your universal remote control or set-top box manufacturer, or call the Dynex Customer Care Center in the US & Canada at 1-800-305-2204, and in Mexico at 01-800-926-3020.

## Making connections

Before you make any connections:

- Check the plugs on the ends of cables to make sure that they are the correct type before you try plugging them into jacks on the TV.
- Make sure that all plugs are securely inserted into the jacks. Loose connections can result in image or color problems.
- When connecting devices to the TV, make sure that the TV and the device are turned off and that the power cords are unplugged.

## Selecting a location

You should select a location for the TV:


- Where direct light does not reflect on the screen
- That has indirect and soft lighting
- Where the TV has access to an antenna or cable TV connection
- Where the TV has access to a power outlet

**Note:** Watching TV in total darkness or with a reflection on the screen may cause eye strain.

## Connecting the power

**To connect the power cord:**

- Connect the power cable to the **AC IN** jack on the back of the TV, then connect the other end to a power outlet.

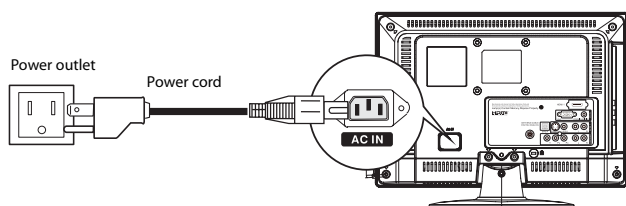

**Notes:**


- The AC plug on the TV may be different from the one shown.
- Make sure that you only use the type of power source indicated on the marking label.
- Always unplug the power cord when not using the TV for a long period of time.

## Connecting an HDMI device

**Note:** If your device has an HDMI connection, we recommend you use that to get the best quality possible.

**To connect an HDMI device:**

- Connect one end of an HDMI cable (not included) to the **HDMI** jack on the back of your TV, then connect the other end of the cable to the **HDMI OUT** jack on the HDMI device.

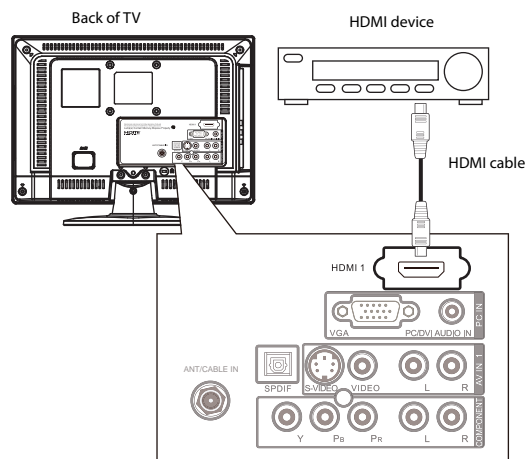

**Note:** To connect a DVI device, use a DVI to HDMI adapter cable to connect to the **HDMI** jack on the TV, then connect an audio cable to the **PC/DVI AUDIO IN** jack on the back of the TV.

**To play from the HDMI device:**

- 1 Turn on the TV, then press **INPUT**. The **INPUT SOURCE** menu opens.
- 2 Press **▲** or **▼** to select **HDMI**, then press **ENTER**.

**Note:** You can also press **HDMI** once to select **HDMI**.


- 3 Turn on the HDMI device, then set it to the correct mode. Refer to the instructions that came with the HDMI device.

## Connecting a component video device

Component cables often have red, green, and blue color-coded video connectors and red and white audio connectors. Match the colors when making connections.

**To connect a component video device:**

- 1 Make sure that your TV's power cord is unplugged and the component video device is turned off.
- 2 Connect a component video cable to the **COMPONENT OUT** jacks on the component video device.

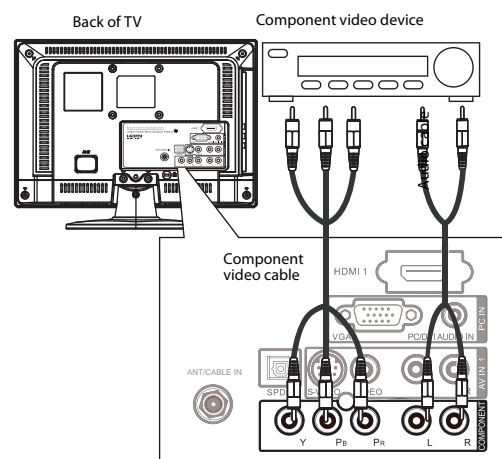



- 3 Connect the other end of the component video cable to the **COMPONENT Y/Pb/Pr** jacks on the back of your TV.
- 4 Connect an audio cable to the **AUDIO OUT** jacks (L/R) on the component device.
- 5 Connect the other end of the audio cable to the **COMPONENT AUDIO-R** and **AUDIO-L** jacks on the back of your TV.

**To play from the component video device:**


- 1 Turn on the TV, then press **INPUT**. The **INPUT SOURCE** menu opens.
- 2 Press **▲** or **▼** to select **Component**, then press **ENTER**.  
*Note: You can also press **COMP** to select **Component**.*
- 3 Turn on the component video device and start playback. Refer to the instructions that came with the component video device.

## Connecting an antenna, cable TV, or satellite TV box via coax

- If you are connecting a satellite TV or cable box, you can use one of the following (if available):
  - Best - HDMI cable
  - Better - Video component cables
  - Better - S-Video cable
  - Good - Video composite cable
  - Acceptable - 75-ohm coaxial cable.

**To connect an antenna, cable TV, or satellite TV box:**

- Connect one end of a 75-Ohm, coaxial cable to the RF jack on the back of the TV, then connect the other end of the cable to the antenna or cable TV wall jack.

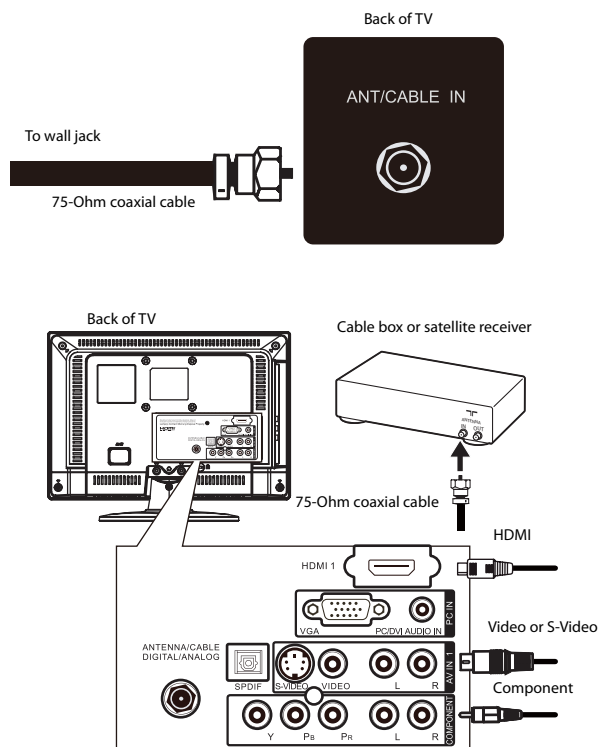

**Notes:**

- We recommend using a 75-Ohm, coaxial cable to reduce interference and noise that may be caused by radio wave transmissions.
- Do not bundle the coaxial cable with the power cord or any other cables.
- If you are using an antenna and reception is not good, contact a service technician to adjust the antenna.

## Connecting a VCR

***Note:** If the VCR has an HDMI jack (best), component jacks (better), or an S-Video jack (good), connect the VCR using the best available connection.*


**To connect a VCR:**

- 1 Make sure that your TV's power cord is unplugged and the VCR is turned off.
- 2 Connect one end of a standard AV cable (not included) into the **AV IN 1 VIDEO** jack on the back of the TV, then connect the other end of the cable to the **AV OUT VIDEO** jack on the VCR.

-OR-

For a better picture, you can connect an S-Video cable to the **S-VIDEO OUT** jack on the VCR and the **S-VIDEO** jack on your TV.

***Note:** Cables are often color-coded to connectors. Connect yellow to yellow, red to red, and white to white.*

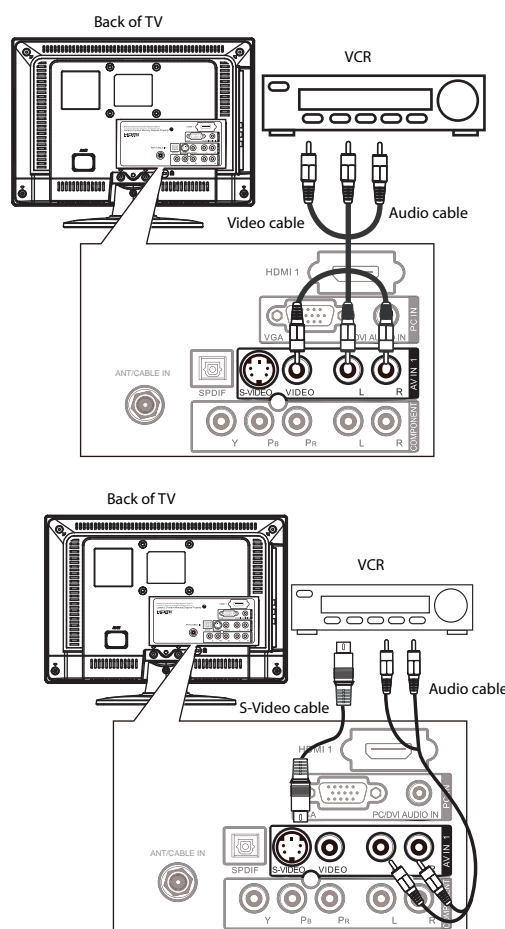

- 3 Connect the audio connectors of the AV cable (the red and white connectors) to the **AV OUT AUDIO** jacks of the VCR, then connect them to the **AV IN 1 AUDIO-L** and **AUDIO-R** jacks on the back of your TV.

**To play the VCR:**

- 1 Turn on the TV, then press **INPUT**. The **INPUT SOURCE** menu opens.
- 2 Press **▲** or **▼** to select **AV1** or **S-Video**, then press **ENTER**.

***Note:** You can also press **VIDEO** once to select **AV1** or three times for **S-Video**.*


- 3 Turn on the VCR, insert a videotape, then press **PLAY** on the VCR.

## Connecting a camcorder or game console

**Note:** If your game console has an HDMI connection, you will get better quality using the HDMI connection instead of the AV connection.

### To connect a camcorder or game console:

- 1 Make sure that your TV's power cord is unplugged and the camcorder or game console is turned off.
- 2 Connect one end of a standard AV cable (not included) into the **AV IN 2 VIDEO** jack on the side of your TV, then connect the other end of the cable to the **AV OUT VIDEO** jack on the camcorder or game console.

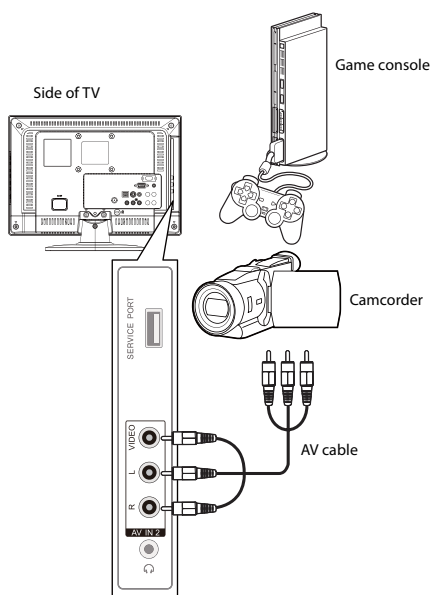

**Note:** Cable connectors and jacks are often color-coded. Match the colors when you connect the AV cable.

- 3 Connect the audio connectors of the AV cable (the red and white connectors) to the **AV OUT AUDIO** jacks of the camcorder or game console, then connect them to the **AV IN 2 AUDIO-L** and **AUDIO-R** jacks on the side of your TV.

### To playback the camcorder or play the game console:

- 1 Turn on the TV, then press **INPUT**. The **INPUT SOURCE** menu opens.
- 2 Press **▲** or **▼** to select **AV2**, then press **ENTER**.

**Note:** You can also press **VIDEO** twice to select **AV2**.


- 3 Turn on the camcorder or game console, then follow the instructions that came with the device to play from the camcorder or game console.

## Connecting a computer

**Note:** If your computer has an HDMI connection, you will get better quality using the HDMI connection instead of the PC IN VGA connection.

### To connect a computer:

- 1 Make sure that your TV's power cord is unplugged and the computer is turned off.
- 2 Connect one end of a VGA cable (not included) to the **PC IN VGA** jack on the back of the TV, then connect the other end of the cable to the **VGA** jack on the computer.

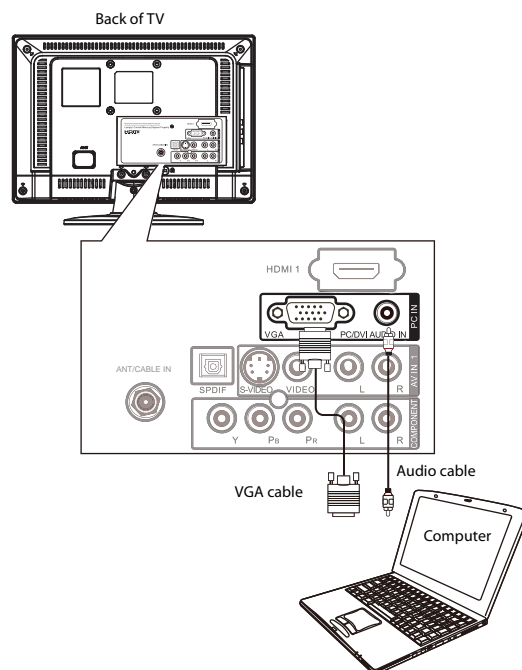

- 3 Connect one end of an audio cable (not included) to the **PC/DVI AUDIO IN** jack on the back of the TV, then connect the other end of the cable to the **AUDIO OUT** jack on the computer.

**Note:** The audio cable should have a stereo mini-plug.

### To play video from the computer:

- 1 Turn on the TV, then press **INPUT**. The **INPUT SOURCE** menu opens.
- 2 Press **▲** or **▼** to select **VGA**, then press **ENTER**.

**Tip:** You can also press the **VGA** button on the remote for VGA.

- 3 Turn on the computer, then adjust the computer display properties as needed.


**Note:** When the computer enters standby mode, your TV turns off. If your TV does not turn on when you "wake" your computer, press **⏻** (power) on your TV or remote control.

## Connecting a home theater system

### Connecting using digital audio cable

#### To connect using digital audio cable:

- 1 Make sure that your TV's power cord is unplugged and the home theater system is turned off.
- 2 Connect one end of a digital optical audio cable (not included) to the **DIGITAL OUTPUT** jack on the back of the TV.

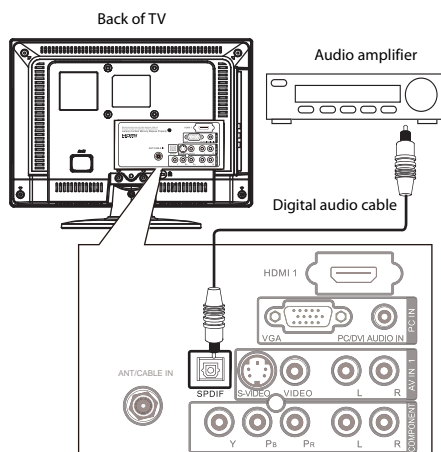

- 3 Connect the other end of the audio cable to the **digital audio in** jack on the home theater system.

**Note:** The **DIGITAL OUTPUT** jack only works with digital TV channels.

#### To play TV sound through a home theater system:


- 1 Turn on the TV and select a program to watch.
- 2 Turn on the home theater system and select the TV sound source, then adjust the volume to a comfortable level.

## Connecting headphones

**Warning:** When using headphones, adjust the headphone volume to avoid excessively loud volume which can damage your hearing.

#### To connect headphones:

- Plug the headphones (not included) into the (headphone) jack on the side of the TV.

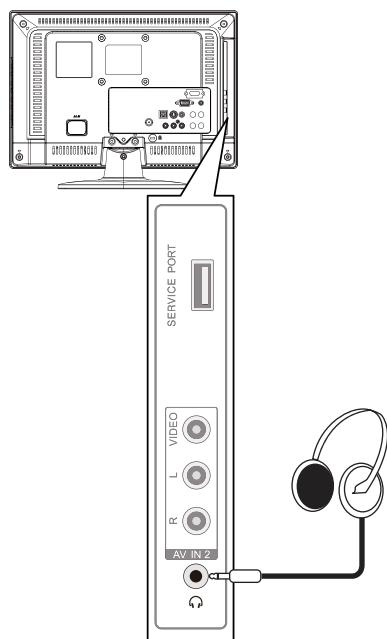

## Turning on your TV for the first time


The first time you turn on your TV, the Setup Wizard opens. The Setup Wizard guides you through setting up basic settings including the menu language, time mode, picture mode, and TV signal source.

#### To configure your TV:

- 1 Make sure that you have inserted the batteries in the remote control, connected your devices to the TV, and connected the AC power.
- 2 Press (Power), then wait several seconds. The initial *Setup Wizard* opens (only the first time you turn on your TV) to the *Choose your menu language* screen.




- 3 Press or to select **English**, **French**, or **Spanish**, then press **ENTER** to confirm. The *Time* screen opens with **Mode** highlighted.

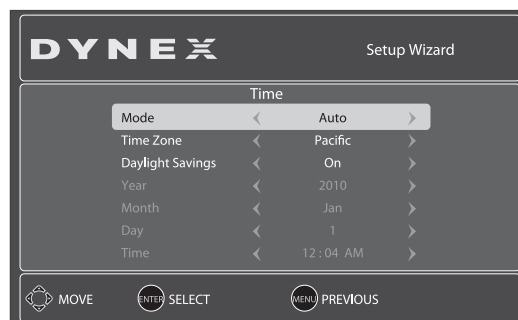


- 4 Press or to highlight **Auto** or **Manual** time mode, then press **ENTER**. The *Choose your Picture Mode* screen opens.

**Note:** If the time mode is set to **Auto**, the date and time are set based on a time signal received from a DTV channel and the only options you can adjust are **Time Zone** and **Daylight Savings**.

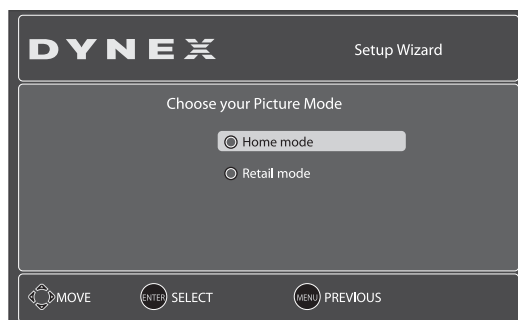

- 5 Press or to select **Home mode** or **Retail mode**, then press **ENTER** to confirm.

If you chose **Home mode** (default - has the same settings as the **Energy Savings** picture mode), the *Choose your TV source* screen opens. If you chose **Retail mode** (has the same settings as the **Vivid** picture mode), you will be asked whether you really want this mode, because no energy savings will be realized with your TV in this mode.

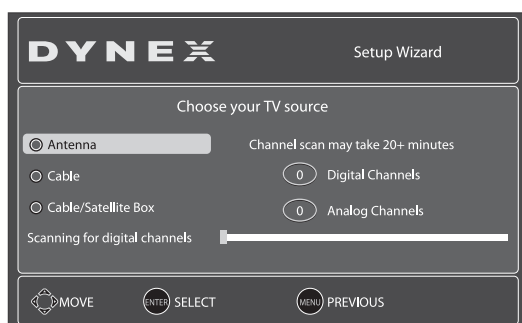

- 6 Press **▲** or **▼** to select **Antenna**, **Cable**, or **Cable/Satellite Box**, depending on the type of connection you have.
- If you are using an antenna for a standard or HD TV signal, select **Antenna**.
  - If your cable is connected directly to the TV (without a tuner box), select **Cable**.
  - If your cable is connected to your TV through a tuner box, select **Cable/Satellite Box**.

If you selected **Antenna** or **Cable**, your TV automatically scans for available channels in your area and stores the channel information in the channel list. This may take several minutes. While scanning, the TV displays a progress report.

— OR —

If you selected **Cable/Satellite Box**, the auto scan is not necessary and will not appear.

**Note:** During auto scan, digital programs will be scanned first, then analog programs. When all available digital programs have been searched, the screen will ask you to "Press **EXIT** if you don't need analog channel scan." At this point you can press **EXIT** to exit the analog channel scan, or just ignore it and the TV will go on scanning.

You can press **EXIT** at any time to stop the auto scan, but you will need to run the auto scan again to create a channel list.


- 7 Select the corresponding video input source through the **INPUT SOURCE** menu.

**Note:** You can change the menu language or scan for channels at a later date. For more information, see "Selecting the menu language and transparency" on page 26 or "Automatically scanning for channels" on page 18.

## Selecting the video input source

To select the video input source:

- 1 Turn on your TV, then press the **INPUT** key on the remote, or the **INPUT** button on the TV. The **INPUT SOURCE** list opens.

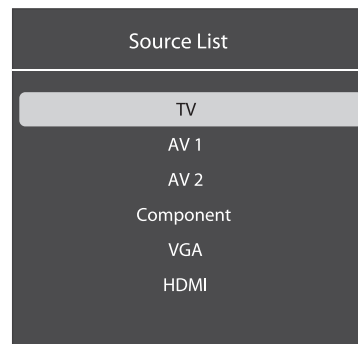

- 2 Press **▲** or **▼** to highlight the video source, then press **ENTER**. You can also select the input source using the following remote control buttons:
- **TV**—Press to switch to **TV** mode.
  - **VIDEO**—Press to toggle between AV 1 (or S-Video) and AV 2 inputs.
  - **COMP**—Press to select the **Component** input.
  - **HDMI**—Press to select the **HDMI** input.
  - **VGA**—Press to view a computer connected to the TV.

## Selecting a channel

To select a channel:

- Press **CH▲** or **CH▼** to go to the next or previous channel.
- Press the number buttons to enter the channel number you want, then wait for the channel to change, or press **ENTER** to change the channel immediately.
  - To select a digital channel, press the number buttons to select the main digital channel, then press the hyphen (-) button, then the number buttons again to select the sub-channel. Wait for the channel to change or press **ENTER** to change the channel immediately. For example, enter 13, then - (hyphen), then 1 to go to channel 13.1.

**Note:** Button presses must be within three seconds of each other.

- Press **RECALL** to go to the last channel viewed.
- Press **FAVORITE** to display a list of your saved favorite channels, press **▲** or **▼** to select the channel you want from the list, then press **ENTER** to go to that channel.

**Note:** If the list has more than one page, press **◀** or **▶** to scroll through the pages.

## Adjusting the volume

To adjust the volume:

- Press **VOL+** or **VOL-** to increase or decrease the volume.
- Press **MUTE** to temporarily turn off speaker sound. Press **MUTE** again to restore the sound.

## Understanding the basics

### Turning your TV on or off

To turn your TV on or off:

- 1 Plug the power cord into an AC power outlet.
- 2 Press **⏻** (power). Your TV turns on and the power indicator LED turns blue.
- 3 Press **⏻** again to turn off your TV. When you turn off your TV, it goes into standby mode and the power indicator LED turns red.


**Warning:** When your TV is in standby mode, it is still receiving power. To completely disconnect power, unplug the power cord.

**Note:** If your TV does not receive an input signal for 15 minutes, it automatically goes into standby mode.


## Displaying program information

### To display program information:

- Press **INFO** to show an information banner. The information banner shows current program information such as channel number, video input source, and resolution.

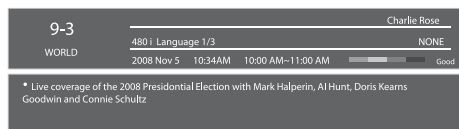


- Digital signal information**—Displays channel number, station name, channel label (if present), broadcast program name, TV rating, signal type, audio information, resolution, CC mode, current time, and current program start and end times when watching a digital channel.
- Analog signal information**—Displays channel number, channel label (if preset), signal type, audio information, and resolution when watching an analog channel.
- Press **GUIDE** to show the digital program guide, which may show a list of available programs, program times, and program summaries, depending on the information provided by the broadcaster.

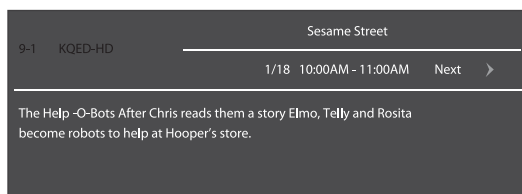


## On-screen menu overview

### Picture menu

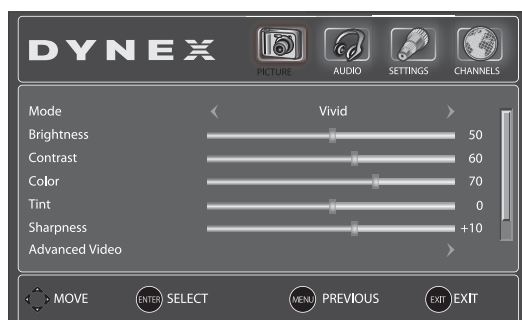

### Audio menu

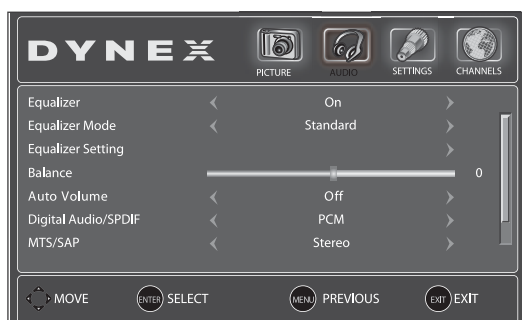

### Settings menu



### Channel menu




### Notes:

Depending on the signal source selected, you may see different options on your screen. The above menus are shown in TV mode.

Menu items that are not selectable are grayed out. Menus in this manual are described in TV mode, unless otherwise indicated.

The illustrations and screens shown in the manual are for explanation purposes and may vary from the actual screens on your TV.

## Navigating the menus

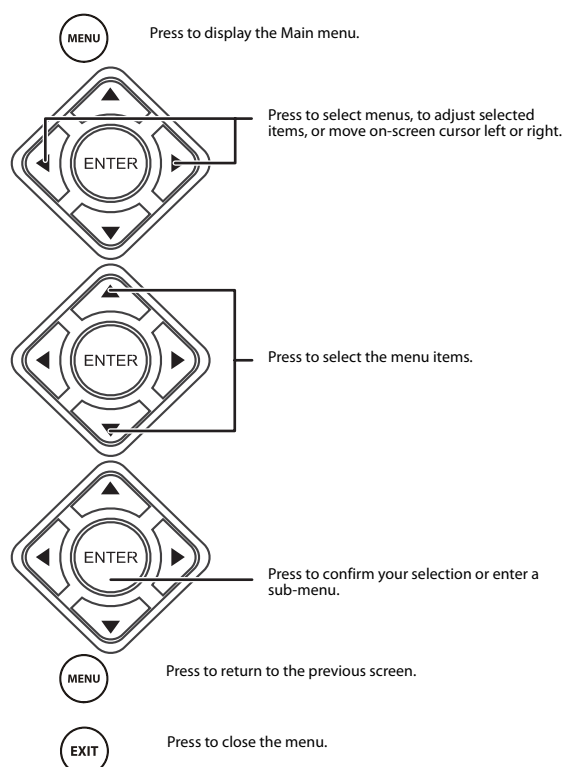




## Adjusting basic settings

To adjust basic settings:

- 1 Press **MENU**. The **PICTURE** menu opens.

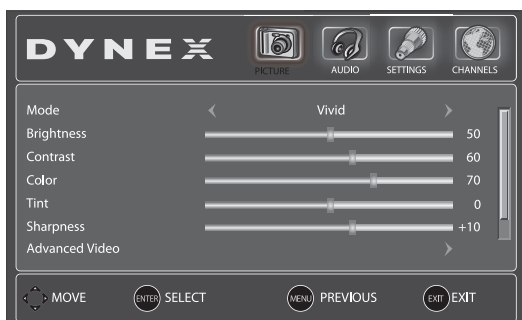

- 2 Press **◀** or **▶** to highlight **SETTINGS**. The **Settings** menu opens.




- 3 Press **▲** or **▼** to highlight an option, then press **ENTER** to enter the sub-menu. You can select:
  - **Parental Controls**—Control which programs/movies your children can watch, based on industry ratings.
  - **Closed Caption**—Turn closed captioning on or off. Also lets you set closed caption options.
  - **Time**—Set the clock and sleep timer.
  - **Menu Settings**—Set menu language and menu transparency.
  - **Input Labels**—Create a unique name for a device connected to your TV's input jacks.
  - **Computer Settings**—Adjust picture settings to optimize a computer display. (This menu becomes available only when a computer display is connected to the television.)
  - **Component Settings**—Adjust picture phase (to minimize horizontal distortion and reset **component** settings to factory default).
- 4 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Adjusting the picture

### Adjusting the TV picture

To adjust the picture:

- 1 Press **MENU**. The on-screen menu opens.

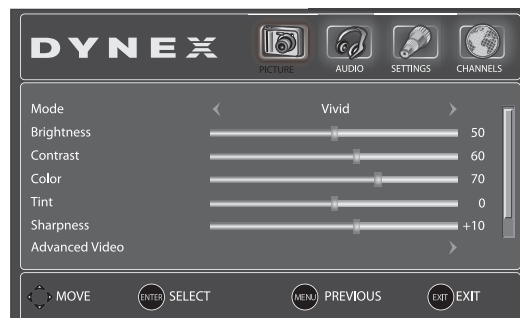

- 2 Press **▲** or **▼** to highlight an option, then press **◀** or **▶** to adjust the option. You can select:

- **Mode**—Selects the picture mode. You can select:
  - **Vivid** (a bright and vivid picture)
  - **Standard** (a standard picture)
  - **Theater** (a finely detailed picture)
  - **Sports** (a dynamic picture)
  - **Energy Saving** (the backlight brightness is decreased)
  - **Custom** (customized picture).

**Note:** You can also press **PICTURE** on the remote control to select the picture mode.

- **Brightness**—Adjusts the brightness.
- **Contrast**—Adjusts the contrast.
- **Color**—Adjusts the color saturation.
- **Tint**—Adjusts the image tint.
- **Sharpness**—Adjusts the sharpness.

- 3 Press **▲** or **▼** to highlight **Advanced Video**, then press **◀** or **▶** to adjust the option. You can select:

- **Aspect Ratio**—Selects the aspect ratio of the picture. You can select:
  - **Auto** (selects the correct aspect ratio automatically in TV mode only).
  - **Normal** (selects the correct aspect ratio to match the source image).
  - **Zoom** (enlarges the picture but may crop the top and bottom).
  - **Wide** (shows a full-screen picture).
  - **Cinema** (stretches the picture at the edges, but maintains a good aspect ratio at the center of the screen).

**Note:** The above aspect ratios are all available only when **Overscan** is turned **ON** when watching a digital program.

- **Overscan**—Turn this **On** to adjust the picture's reproduction rate in Component, HDMI/DVI, or DTV mode.
- **Color Temperature**—Selects the color temperature. You can select **Warm** (to enhance the reds), **Cool** (to enhance the blues), or **Normal**.
- **Noise Reduction**—Selects the noise reduction mode to reduce picture noise (snow). You can select **Low**, **Middle**, **High**, or **Off**.
- **Backlight**—Controls the overall brilliance of the screen.


- **Advanced Contrast**—Opens the *Advanced Contrast* submenu. Turn this **On** to optimize the picture display for a more vivid image. You can also set the **Dynamic Contrast Ratio** to **On** to automatically adjust the contrast between the light and dark areas of the picture.
- 4 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Adjusting the computer image

*Note: These settings are only available when the input source is VGA and your TV is receiving a computer signal.*

### To adjust the computer image:

- 1 Make sure that your TV is in VGA mode. For more information, see "Selecting the video input source" on page 13.
- 2 Press **MENU**. The on-screen menu opens.

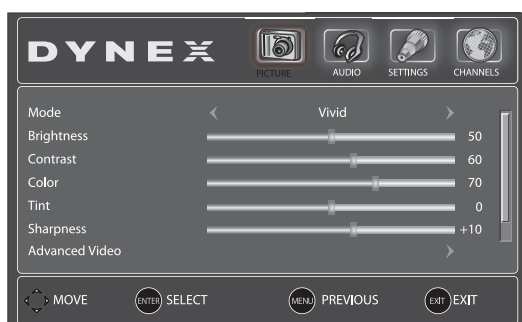

- 3 Press **◀** or **▶** to highlight **SETTINGS**. The *SETTINGS* menu opens.



- 4 Press **▲** or **▼** to highlight **Computer Settings**, then press **ENTER**. The *Computer settings* menu opens.



- 5 Press **▲** or **▼** to highlight an option, then press **◀** or **▶** to adjust the option. You can adjust:
  - **Auto Adjust**—Automatically adjusts the image settings such as position and phase
  - **H-Position**—Moves the image right or left
  - **V-Position**—Moves the image up or down
  - **Clock**—Adjusts the sample frequency

- **Phase**—Adjusts the focus of stable images
- **Reset Computer Settings**—Resets the computer settings to factory default.


- 6 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Setting the component image

*Note: These settings are only available when the input source is Component and your TV is receiving a signal.*

### To set the component image:


- 1 Press **MENU**. The on-screen menu opens.

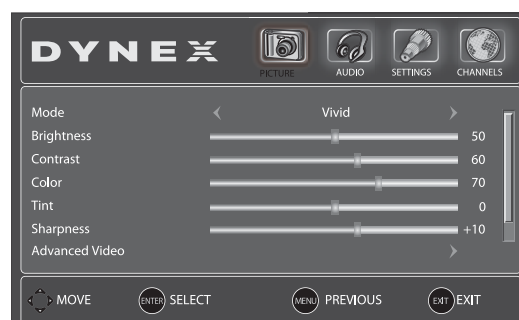

- 2 Press **◀** or **▶** to highlight **SETTINGS**. The *SETTINGS* menu opens.



- 3 Press **▲** or **▼** to highlight **Component Settings**, then press **ENTER**. The *Component Settings* menu opens.

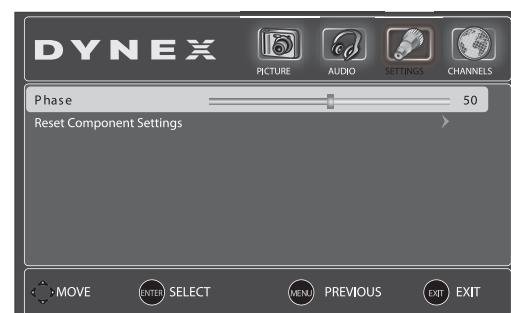


- 4 Press **▲** or **▼** to highlight an option, then press **◀** or **▶** to adjust the option. You can adjust:
  - **Phase**—To minimize horizontal distortion (0~100)
  - **Reset Component Settings**—Resets the component settings to factory default.
- 5 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Adjusting the sound


### Adjusting the sound

To adjust the sound:

- 1 Press **MENU**. The on-screen menu opens.

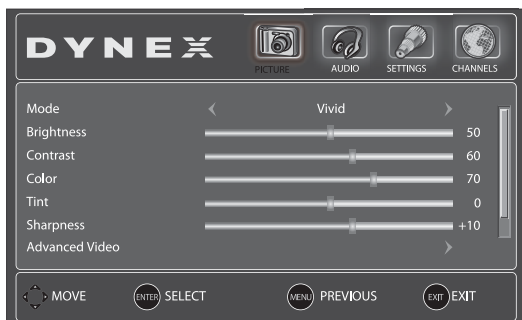

- 2 Press **◀** or **▶** to highlight **AUDIO**. The **AUDIO** menu opens.

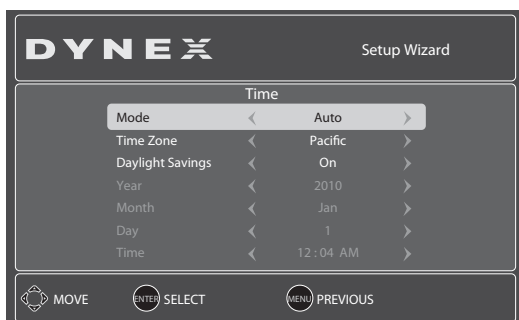

- 3 Press **▲** or **▼** to highlight an option, then press **◀** or **▶** to adjust the option. With the Equalizer **Off** you can select:
  - **Bass**—Adjusts the low sounds.
  - **Treble**—Adjusts the high sounds.

With the Equalizer **On** you can select:

- **Equalizer Mode**—Selects the sound mode. You can select:
  - **Standard** (for normal programs)
  - **Theater** (for movies)
  - **Music** (for musical programs)
  - **News** (for news programs)
  - **Custom** (for a customized sound mode).

**Note:** You can also press **AUDIO** one or more times to select the Equalizer mode.

- **Equalizer Setting**—Selects the equalizer frequency. You can select **120 Hz**, **500 Hz**, **1.5 kHz**, **5 kHz**, or **10 kHz**. Press **◀** or **▶** to switch between columns, then press **▲** or **▼** to adjust the setting. Press **MENU** to confirm.

You can adjust the following options regardless of the Equalizer settings:

- **Balance**—Adjusts the balance between the left and right audio channels.
- **Auto Volume**—Automatically adjust the volume to be consistent across programs and channels.
- **Digital Audio/SPDIF**—(digital channels only) Selects the digital audio output mode. You can select **RAW** (outputs audio in its original format) or **PCM** (outputs the audio in PCM mode, if available).
- **MTS/SAP**—Selects the sound mode (analog channels only).
  - **Mono**—Produces a clearer sound if stereo sound is difficult to hear.

- **Stereo**—Produces dynamic stereo sound for sporting events and concerts.
- **SAP**—Selects a second language, weather, or added commentary, if available.
- **Audio Language**—(digital channels only) Selects an alternate audio language, if available.
- **Reset Audio Settings**—Resets all audio settings to factory defaults. When you select this option, a confirmation box opens. Press **◀** or **▶** to select **Yes** or **No**, then press **ENTER** to confirm.


- 4 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

### Playing TV audio only

You can turn off the picture on your TV and listen to only the program audio.

To play only the TV audio:

- 1 Press **MENU**. The on-screen menu opens.

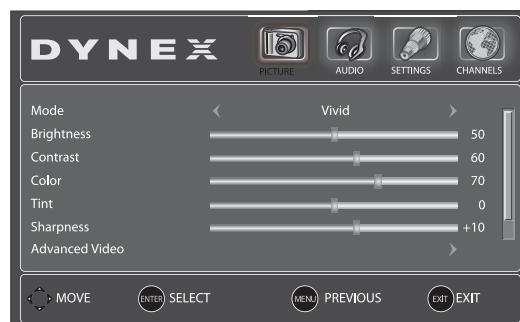

- 2 Press **◀** or **▶** to highlight **CHANNELS**. The **CHANNELS** menu opens.



- 3 Press **▲** or **▼** to highlight **Audio Only**, then press **◀** or **▶** to select **On**.
- 4 Press **EXIT** to close the menu. After pressing **EXIT**, the picture will turn off in approximately three seconds.

#### Notes:

*Audio Only works only when the input source is TV and your TV is receiving a broadcast signal.*

*To exit Audio Only mode, press any button. When you exit Audio Only mode, the Audio Only option is automatically reset to Off.*



## Changing channel settings


### Automatically scanning for channels

When you scan for channels, your TV searches for channels with signals and stores the channel information in the channel list. When you press **CH $\wedge$**  or **CH $\vee$** , your TV goes to the next or previous channel in the channel list and skips the channels that do not have signals.

If the TV signal source changes, for example if you change from an outdoor antenna to cable TV (no box), you need to scan for channels.

#### To auto scan for channels:

- 1 Press **MENU**. The on-screen menu opens.

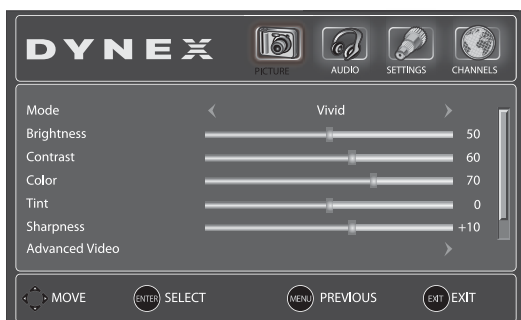

- 2 Press **◀** or **▶** to highlight **CHANNELS**. The **CHANNELS** menu opens.



- 3 Press **▲** or **▼** to highlight **Auto Channel Search**, then press **ENTER**. The **Auto Channel Search** screen opens.



- 4 Press **▲** or **▼** to select **Antenna** or **Cable**, then press **ENTER** to start the scan.

You can see the progress of the search and the number of channels found in the on-screen menu. After the scan is complete, the menu closes and your TV tunes to the first channel on the list.

#### Notes:

You can press **EXIT** to stop the search at any time.

If you don't need analog channels after auto searching for digital channels, you can press **EXIT** or **MENU** within ten seconds of the prompt.

You don't need to scan for channels if you are using a cable or satellite box because the available channels are provided by the box. Press **EXIT** to close the menu.


- 5 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

### Hiding and adding channels


You can delete channels from the channel list so that your TV skips the channels when you press **CH $\wedge$** /**CH $\vee$** . You can still tune to the hidden channel by using the number buttons. You can also add channels to the list.

#### To hide or add a channel:


- 1 Press **MENU**. The on-screen menu opens.

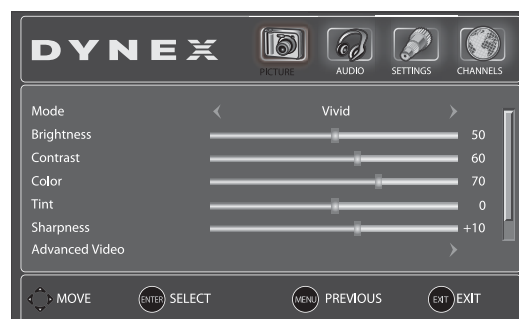

- 2 Press **◀** or **▶** to highlight **CHANNELS**. The **CHANNELS** menu opens.

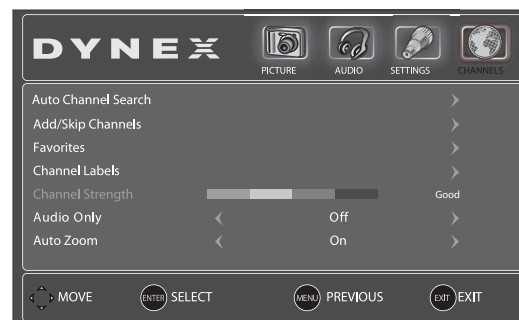

- 3 Press **▲** or **▼** to highlight **Add/Skip Channels**, then press **ENTER** or **▶**. The **Channel List** screen opens.

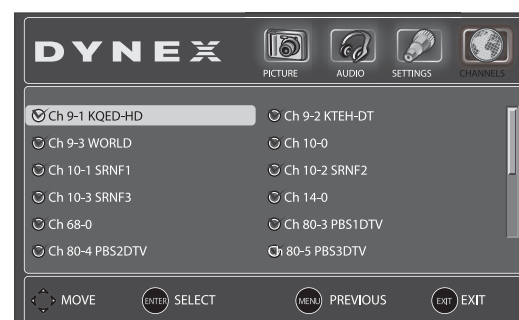

- 4 Press **▲**, **▼**, **◀** or **▶** to highlight the channel you want to hide or add (the default is to show the channel), then press **ENTER** to remove the check mark from the channel. You can also add a channel by selecting it, then pressing **ENTER** to place a check mark next to it.

**Note:** If the list has more than one page, press **▲** or **▼** to scroll through the pages.


- 5 Repeat Step 4 to hide or add additional channels.
- 6 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Setting up a favorite channel list


You can create a favorite channel list so you can quickly browse through your favorite channels by pressing **FAVORITE**, then selecting a channel from the favorite channel list.

**To set up the favorite channel list:**


- 1 Press **MENU**. The on-screen menu opens.

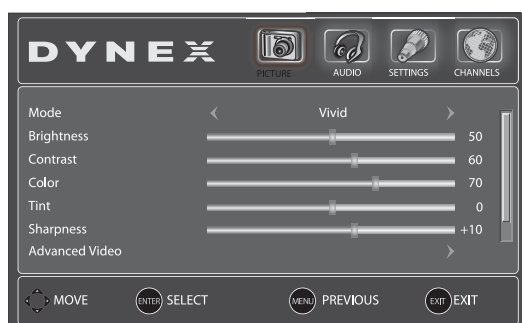

- 2 Press **◀** or **▶** to highlight **CHANNELS**. The **CHANNELS** menu opens.

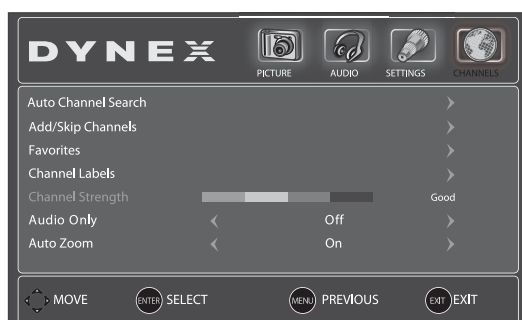

- 3 Press **▲** or **▼** to highlight **Favorites**, then press **ENTER** or **▶**. The **Favorite Channel list** opens.

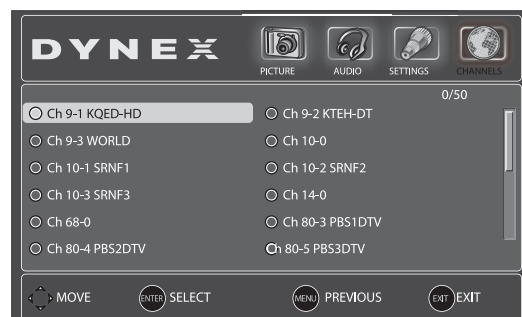

- 4 Press **▲**, **▼**, **◀** or **▶** to highlight the channel you want to add to the **Favorites** list, then press **ENTER** to mark the channel. A check mark appears if the channel is added to the list. The check mark disappears if you delete the channel from the list.

**Note:** If the list has more than one page, press **▲** or **▼** to scroll through the pages.


- 5 Repeat Step 4 to add additional channels to your Favorites list.

- 6 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.
- 7 To select a channel in the favorite channel list, press **FAVORITE**, press **▲** or **▼** to highlight the channel, then press **ENTER**.

## Displaying the TV Channels List

**To display the TV Channels list:**

- 1 Press **CH-LIST**. The **Channels List** opens.

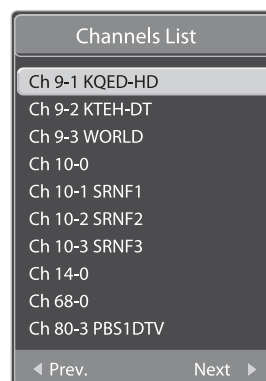


- 2 Press **▲**, **▼**, **◀** or **▶** to highlight the channel you want to watch, then press **ENTER**. Your TV tunes to that channel.

## Adding or changing a channel label

If a channel is not already labeled, you can label the channel to make it easier to identify. You can also relabel a channel that is already labeled.

**To label a channel:**

- 1 Press **MENU**. The on-screen menu opens.

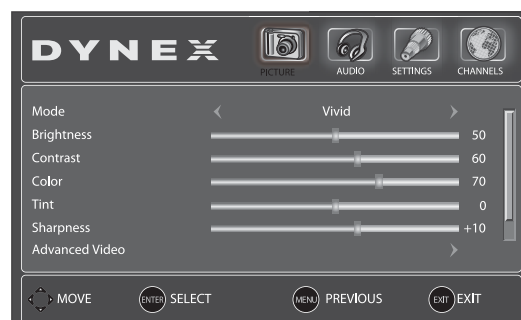

- 2 Press **◀** or **▶** to highlight **CHANNEL**. The **CHANNEL** menu opens.



- 3 Press **▲** or **▼** to highlight **Channel Labels**, then press **ENTER**. The *Channel Label* screen opens.



- 4 Press **▲** or **▼** to select the channel for which you want to add or change the label, then press **►** to move the cursor to the label selection field.
- 5 Press **▲** or **▼** to select a character, then press **◀** or **▶** to move to the next position. Repeat to add more characters (you can add as many as 11 characters).
- 6 Press **ENTER** to confirm the label.
- 7 Press **◀** or **▶** to select **Yes** or **No**, then press **ENTER** to confirm.
- 8 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Checking digital TV signal strength

You can check the signal strength of digital channels to determine if you need to adjust your antenna or digital cable input. The higher the signal strength, the less likely you are to experience picture degradation.

### To check signal strength:

- 1 Press **MENU**. The on-screen menu opens.



- 2 Press **◀** or **▶** to highlight **CHANNELS**. The *CHANNELS* menu opens. The signal strength is shown on the menu if you are receiving a digital TV signal.



- 3 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

**Note:** If you are tuned to a digital TV channel, you can press **INFO** to see the digital signal strength.


## Setting parental controls

Parental controls let you prevent your children from watching inappropriate material on TV. When set, parental controls read the rating of the program (with some exceptions, such as news and sports) and deny access to programs that exceed the ratings level you select. To watch programs that exceed the selected rating, you must enter a password.

## Setting or changing the password

### To set the parental password:

- 1 Press **MENU**. The on-screen menu opens.

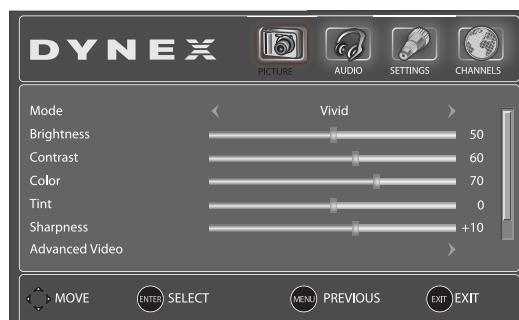


- 2 Press **◀** or **▶** to highlight **SETTINGS**. The *SETTINGS* menu opens.




- 3 Press **▲** or **▼** to highlight **Parental Controls**, then press **ENTER** or **►**. The *Enter Password* screen opens.



- 4 Press the number buttons to enter the four-digit password. The default password is **0000**. The *Parental Controls* menu opens.

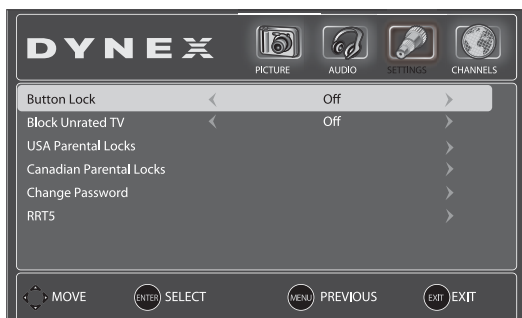

- 5 Press **▲** or **▼** to highlight **Change Password**, then press **ENTER** or **►**. The *Enter New Password* screen opens.

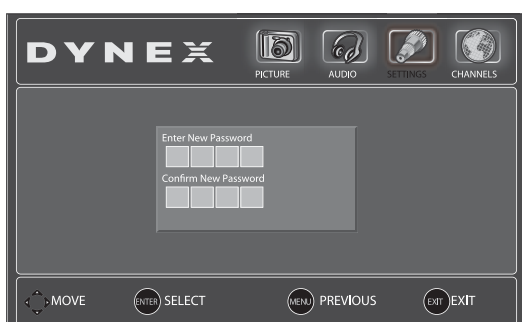

- 6 Press the number buttons to enter the new password. On the next line, enter the new password again to confirm it. The *Parental Controls* menu reopens.

**Note:** If you forget your password, enter **9999**.

- 7 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Setting parental control levels

You can set parental controls for the U.S. and Canada. The following procedure shows how to set controls for U.S. TV ratings. You use similar steps for controlling U.S. movie and Canadian TV ratings.

### To set parental controls:

- 1 Press **MENU**. The on-screen menu opens.



- 2 Press **◀** or **▶** to highlight **SETTINGS**. The *SETTINGS* menu opens.




- 3 Press **▲** or **▼** to highlight **Parental Controls**, then press **ENTER** or **►**. The *Enter Password* screen opens.




- 4 Press the number buttons to enter your four-digit password. The *Parental Controls* menu opens.



- 5 Press **▲** or **▼** to highlight **USA Parental Locks** or **Canadian Parental Locks**, then press **ENTER** or **►**. The *USA Parental Locks* or *Canadian Parental Locks* screen opens.

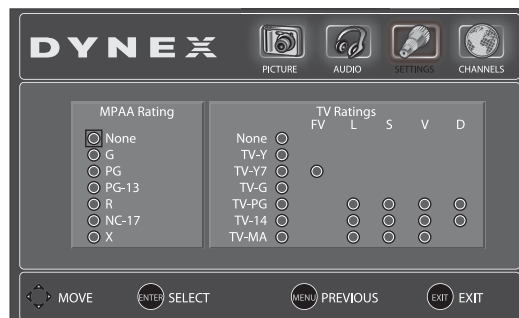

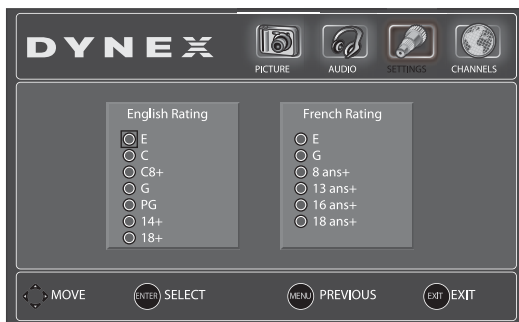

- 6 Press **▲ ▼ ◀ ▶** to highlight the rating you want to block, then press **ENTER**.

**Notes:**

*When you first set parental controls, they take effect immediately.*

*If you have set parental controls then tune to a blocked channel or program, you are prompted to enter the password. After you enter the password, parental controls are tuned off.*

*To turn parental controls back on, you need to turn off your TV. When you turn it back on, parental controls are turned back on.*

- 7 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

U.S. TV ratings (age-based)	
NONE	Not rated.
TV-Y	All children.
TV-Y7	Suitable for children 7 and older.
TV-G	General audiences.
TV-PG	Parental guidance suggested.
TV-14	Parental guidance strongly suggested.
TV-MA	Mature audiences only.

U. S. TV ratings (content-based)	
FV	Fantasy violence.
V	Violence.
S	Sexual situations.
L	Strong language.
D	Suggestive dialog.

U.S. movie (MPAA) ratings	
G	General audiences.
PG	Parental guidance suggested.
PG-13	Suitable for children 13 and older.
R	Parental guidance suggested for children under 17.
NC-17	Not suitable for children under 17.
X	Adults only.
N/A	Movie is not rated.

Canadian English ratings	
E	Exempt programming.
C	Suitable for all children.
C8+	Suitable for children 8 and older.
G	General audiences.
PG	Parental guidance suggested.
14+	Suitable for children 14 and older.
18+	Adults only.

Canadian French ratings	
E	Exempt programming.
G	General audiences.
8ans+	Suitable for children 8 and older.
13ans+	Suitable for children 13 and older.
16ans+	Suitable for children 16 and older.
18ans+	Adults only.

### Blocking unrated TV

#### To block unrated TV:

- 1 Press **MENU**. The on-screen menu opens.




- 2 Press **◀ ▶** to highlight **SETTINGS**. The **SETTINGS** menu opens.



- 3 Press **▲ ▼** to highlight **Parental Controls**, then press **ENTER** or **▶**. The **Enter Password** screen opens.



- 4 Press the number buttons to enter your four-digit password. The *Parental Controls* menu opens.

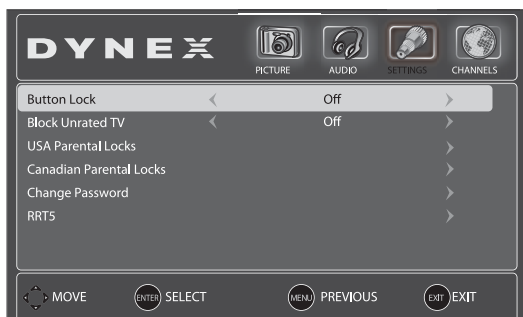


- 5 Press **▲** or **▼** to highlight **Block Unrated TV**, then press **◀** or **▶** to select **On**.
- 6 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

### Downloading rating information


You can download rating information to use when setting parental controls.

#### To download rating information:

- 1 Press **MENU**. The on-screen menu opens.

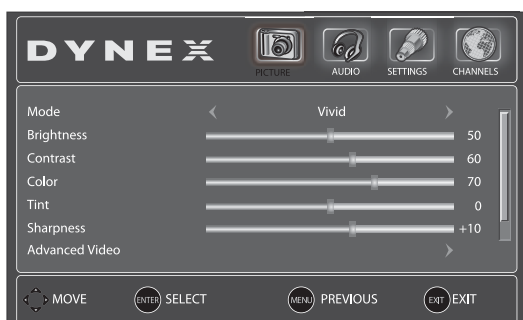


- 2 Press **◀** or **▶** to highlight **SETTINGS**. The *SETTINGS* menu opens.

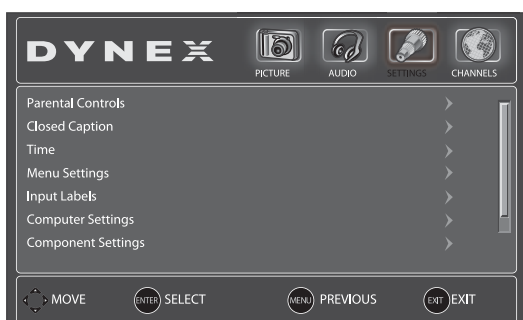

- 3 Press **▲** or **▼** to highlight **Parental Controls**, then press **ENTER** or **▶**. The *Enter Password* screen opens.



- 4 Press the number buttons to enter your four-digit password. The *Parental Controls* menu opens.

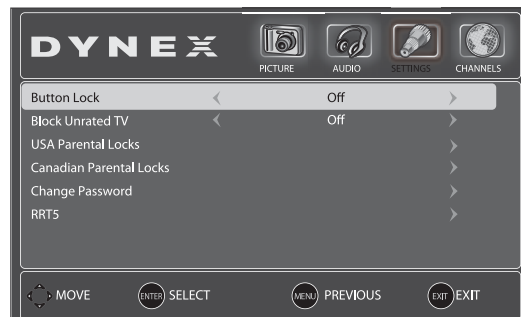

- 5 Press **▲** or **▼** to highlight **RRT5**, then press **ENTER** or **▶**. The *RRT5* menu opens.
- 6 Press **▲** or **▼** to select a rating.

#### Notes:

*If the program is broadcast with RRT5 rating information, the information is downloaded automatically and can be used for parental controls.*

*If the program is not broadcast with RRT5 rating information, no information is downloaded.*


- 7 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

### Locking control buttons

You can lock the control buttons on the TV. When the buttons are locked, you can only operate the TV using the remote control.

#### To lock control buttons:

- 1 Press **MENU**. The on-screen menu opens.

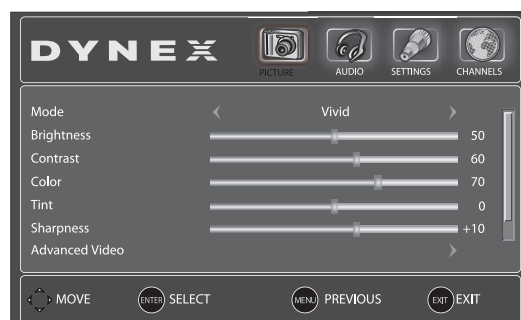

- 2 Press **◀** or **▶** to highlight **SETTINGS**. The *SETTINGS* menu opens.





- 3 Press **▲** or **▼** to highlight **Parental Controls**, then press **ENTER** or **►**. The *Enter Password* screen opens.



- 4 Press the number buttons to enter your four-digit password. The *Parental Controls* menu opens.




- 5 Press **▲** or **▼** to highlight **Button Lock**, then press **◀** or **►** to select **On** (to lock the buttons), or **Off** (to unlock the buttons).  
6 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

- 2 Press **◀** or **►** to highlight **SETTINGS**. The *SETTINGS* menu opens.



- 3 Press **▲** or **▼** to highlight **Closed Caption**, then press **►** or **ENTER**. The *Closed Caption* menu opens.

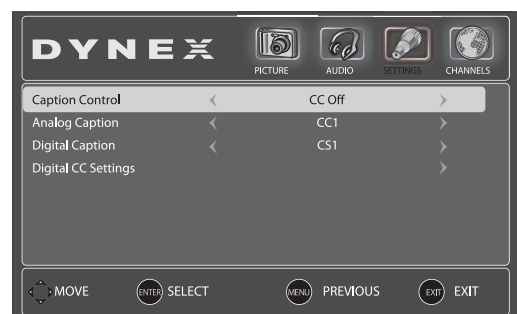

- 4 Press **▲** or **▼** to highlight **Analog Caption** or **Digital Caption**.  
5 Press **◀** or **►** to select a closed captioning mode. You can select:  
• **CC1** through **CC4**—Closed captioning appears in a small banner across the bottom of the screen. **CC1** is usually the “printed” version of the audio. **CC2** through **CC4** display content provided by the broadcaster.  
• **Text1** through **Text4**—Closed captioning that covers half or all of the screen. **Text1** through **Text4** display content provided by the broadcaster.  
6 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Using closed captioning

### Turning closed captioning on or off


To turn closed captioning on or off:

- 1 Press **CCD** on the remote control to cycle through the closed captioning options. You can select **CC On** (turns on closed captioning), **CC on When Mute** (turns on closed captioning when the sound is muted), or **CC Off** (turns off closed captioning).

### Selecting the closed captioning mode

To select the closed captioning mode:


- 1 Press **MENU**. The on-screen menu opens.

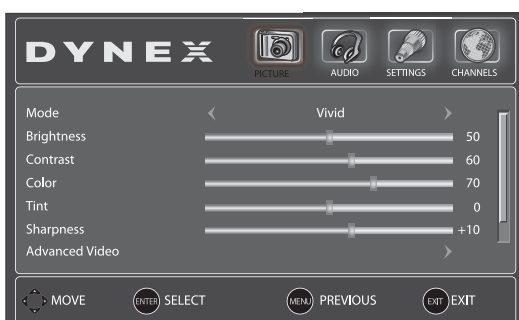

### Customizing digital TV closed captioning styles

To customize DTV closed captioning:


- 1 Press **MENU**. The on-screen menu opens.

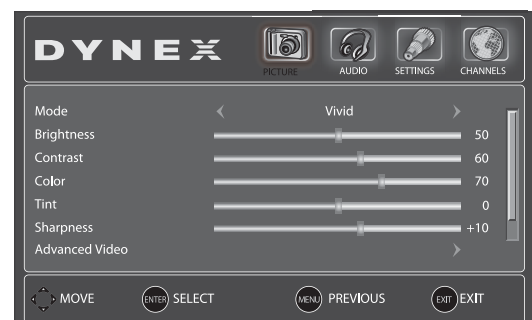


- 2 Press ◀ or ▶ to highlight **SETTINGS**. The *SETTINGS* menu opens.



- 3 Press ▲ or ▼ to highlight **Closed Caption**, then press ▶ or ENTER. The *Closed Caption* menu opens.

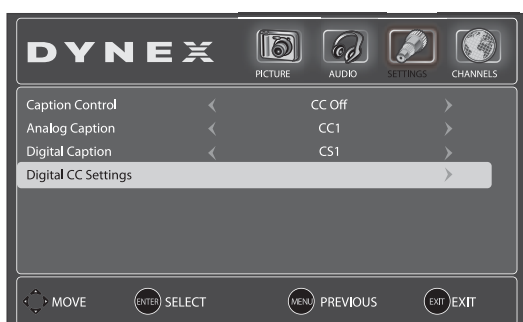

- 4 Press ▲ or ▼ to highlight **Digital CC Settings**, then press ENTER or ▶. The *Digital CC Settings* menu opens.

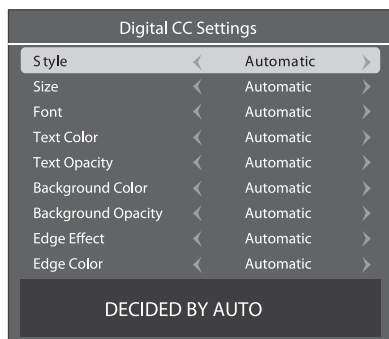

- 5 Press ▲ or ▼ to highlight a style, then press ◀ or ▶ to adjust the style. You can select:
- **Style**—To select a style for the words.
  - **Size**—To select a edge style for the words.
  - **Font**—To select the font type.
  - **Text Color**—To select a color for the text.
  - **Text Opacity**—To select the opacity for the text.
  - **Background Color**—To select a color for the background.
  - **Background Opacity**—To select the opacity for the background.
  - **Edge Effect**—To select edge effect.
  - **Edge Color**—To select a color for the edges.
- 6 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.


**Note:** The default Digital CC Setting is **Automatic**. All other settings will be available only when **Style** is set to **Custom**.

## Adjusting time settings

### Setting the clock

To set the clock:

- 1 Press **MENU**. The on-screen menu opens.

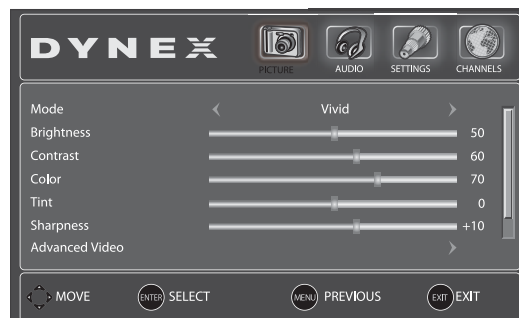

- 2 Press ◀ or ▶ to highlight **SETTINGS**. The *SETTINGS* menu opens.



- 3 Press ▲ or ▼ to highlight **Time**, then press ENTER or ▶. The *Time* menu opens.



- 4 Press ▲ or ▼ to highlight the option you want to adjust, then press ◀ or ▶ to adjust the setting.
- 5 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.




## Setting the sleep timer

You can specify the amount of time before your TV automatically turns off.

To set the sleep timer:

- 1 Press **MENU**. The on-screen menu opens.

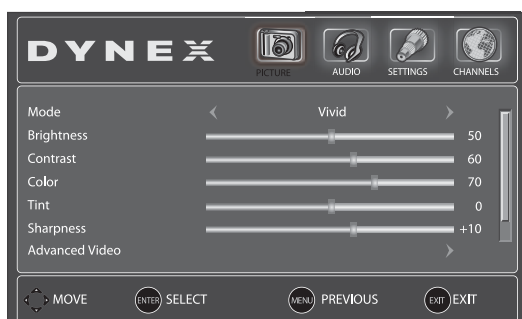

- 2 Press ◀ or ▶ to highlight **SETTINGS**. The **SETTINGS** menu opens.



- 3 Press ▲ or ▼ to highlight **Time**, then press **ENTER** or ▶. The **Time** menu opens.



- 4 Press ▲ or ▼ to highlight **Sleep Timer**, then press ◀ or ▶ to select the amount of time you want your TV to wait before it automatically turns off.

**Note:** To turn off the sleep timer, select **Off**.

- 5 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.


**Note:** You can also press **SLEEP** on the remote control to set the sleep timer.

## Adjusting menu settings

### Selecting the menu language and transparency

To select the on-screen menu language and menu transparency:

- 1 Press **MENU**. The on-screen menu opens.

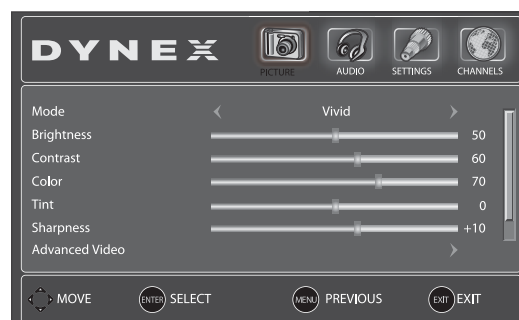

- 2 Press ◀ or ▶ to highlight **SETTINGS**. The **SETTINGS** menu opens.



- 3 Press ▲ or ▼ to highlight **Menu Settings**, then press **ENTER** or ▶. The **Menu Settings** menu opens.




- 4 Press ▲ or ▼ to highlight **Language**, then press ◀ or ▶ to select the menu language you want. Options include **English**, **French**, and **Spanish**.
- 5 Press ▲ or ▼ to select **Transparency**, then press ◀ or ▶ to select the menu transparency you want.
- 6 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Labeling an input source

You can add a label to an input source to make it easier to identify.

### To label an input source:

- 1 Press **MENU**. The on-screen menu opens.

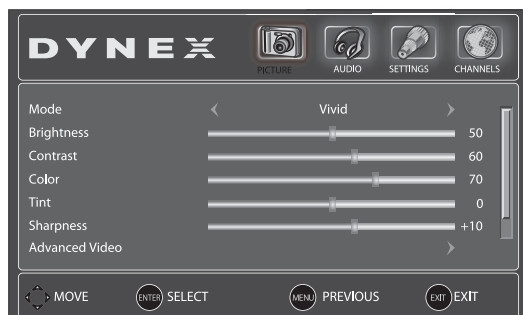

- 2 Press **◀** or **▶** to highlight **SETTINGS**. The **SETTINGS** menu opens.



- 3 Press **▲** or **▼** to highlight **Input Labels**, then press **ENTER** or **▶**. The **Input Labels** screen opens.




- 4 Press **▲** or **▼** to select the input for which you want to change the label, then press **▶** to move to the label selection field.
- 5 Press **▲** or **▼** to select the label you want, then press **ENTER** to confirm the change.
- 6 Press **◀** or **▶** to select **Yes** or **No**, then press **ENTER** to confirm.
- 7 To change another label, press **▲** to move to the label selection field, then repeat Steps 4 through 6.
- 8 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu. The next time you press the **INPUT** button on the remote control, you will see your new label in the **INPUT SOURCE** menu.

## Restoring default settings

**Caution:** When you restore default settings, all the settings (except the password and parental rating) you have customized are reset.

### To restore default settings:

- 1 Press **MENU**. The on-screen menu opens.

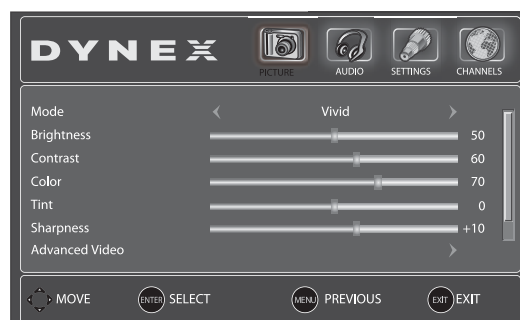

- 2 Press **◀** or **▶** to highlight **SETTINGS**. The **SETTINGS** menu opens.




- 3 Press **▲** or **▼** to highlight **Reset to Default** (you may need to scroll down to find it), then press **ENTER**. A confirmation box opens.
- 4 Press **◀** or **▶** to select **Yes**, then press **ENTER** to confirm.
- 5 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Troubleshooting

 Before calling for service, check the following information for possible solutions to problems you may experience. If none of these solutions work, turn off the TV, then turn it on again.

**Caution:** Do not try to repair the TV yourself. Refer all servicing to qualified repair personnel.

### Video and audio

Problem	Solution
No power.	<ul style="list-style-type: none"> <li>Make sure that the power cord is correctly connected to your TV and a power outlet.</li> <li>Unplug the power cord, wait 60 seconds, then plug the cord back in and turn on your TV.</li> </ul>
No picture.	<ul style="list-style-type: none"> <li>Make sure that the <b>Audio Only</b> option is set to Off. For more information, see "Playing TV audio only" on page 17.</li> <li>Make sure that the video cables are connected securely to the back of your TV.</li> <li>Adjust the contrast and brightness.</li> <li>Make sure that the correct video mode is selected.</li> <li>Make sure that the incoming signal is compatible.</li> <li>Make sure the antenna is connected correctly.</li> <li>Check the closed caption settings. Some TEXT modes can block the screen.</li> </ul>
No picture (screen is not lit) and no sound.	<ul style="list-style-type: none"> <li>Make sure that the power cord is plugged in.</li> <li>Press <b>POWER</b>  on the TV or the remote control.</li> <li>Make sure that the correct video input source is selected. For more information, see "Selecting the video input source" on page 13.</li> <li>Try another channel. The station may be experiencing problems.</li> </ul>
Dark, poor, or no picture (screen is lit), but sound is good.	<ul style="list-style-type: none"> <li>Adjust the brightness. For more information, see "Adjusting the TV picture" on page 15.</li> <li>Make sure that the correct picture mode is selected. For more information, see "Adjusting the TV picture" on page 15.</li> <li>Make sure that the antenna or cable TV is connected correctly and securely. For more information, see "Connecting an antenna, cable TV, or satellite TV box via coax" on page 10.</li> </ul>
No color, dark picture, or color is not correct.	<ul style="list-style-type: none"> <li>Adjust the color saturation. For more information, see "Adjusting the TV picture" on page 15.</li> </ul>
Only snow (noise) appears on the screen.	<ul style="list-style-type: none"> <li>Try another channel. The station may be experiencing problems.</li> <li>Make sure that the antenna or cable TV is connected correctly and securely. For more information, see "Connecting an antenna, cable TV, or satellite TV box via coax" on page 10.</li> <li>Check the signal strength of the channel. See "Checking digital TV signal strength" on page 20.</li> </ul>

Problem	Solution
Dotted lines or stripes appear on the screen.	<ul style="list-style-type: none"> <li>Adjust the antenna.</li> <li>Move the TV away from noise sources such as cars, neon signs, or hair dryers.</li> </ul>
"Ghost" or double images.	<ul style="list-style-type: none"> <li>Use a highly directional outdoor antenna or cable TV.</li> </ul>
The picture has a few bright or dark spots.	<ul style="list-style-type: none"> <li>A few bright or dark spots on an LCD screen is normal. It does not affect the operation of this TV.</li> </ul>
Good picture, but no sound.	<ul style="list-style-type: none"> <li>Increase the volume.</li> <li>Make sure that the sound is not muted.</li> <li>Make sure that the sound mode is set to <b>Stereo</b> or <b>Mono</b>. For more information, see "Playing TV audio only" on page 17.</li> </ul>
Audio noise.	<ul style="list-style-type: none"> <li>Make sure that there is no interference with infrared equipment such as a cordless telephone or headphones. Move the infrared equipment away from the TV to eliminate the noise.</li> </ul>
VGA picture is not stable or synchronized.	<ul style="list-style-type: none"> <li>Make sure that you have selected the correct VGA mode on your computer.</li> </ul>
No output from one speaker.	<ul style="list-style-type: none"> <li>Adjust the balance on the <i>Audio</i> menu.</li> </ul>
After images appear.	<ul style="list-style-type: none"> <li>Do not display a still image, such as a logo, game, or computer image, for an extended period of time. This can cause a permanent after-image to be burned into the screen. This type of damage is not covered by your warranty.</li> </ul>

### Remote control

Problem	Solution
Remote control does not work.	<ul style="list-style-type: none"> <li>Make sure that the power cord is plugged in.</li> <li>Make sure that there are no obstructions between the remote control and the remote control sensor on the front of the TV.</li> <li>Make sure that the batteries are installed correctly. For more information, see "Installing remote control batteries" on page 8.</li> <li>Replace the batteries. For more information, see "Installing remote control batteries" on page 8.</li> </ul>
Trouble programming your existing universal remote control.	<ul style="list-style-type: none"> <li>See instructions and a table of common codes in "Programming a universal remote control to work with your TV" on page 8.</li> <li>Codes are subject to change. For up to date codes, go to <a href="http://www.dynexproducts.com">www.dynexproducts.com</a>.</li> <li>Replace the batteries. For more information, see "Installing remote control batteries" on page 8.</li> </ul>

## General

Problem	Solution
One or more channels do not display.	<ul style="list-style-type: none"> <li>Make sure that the channels are not blocked. For more information, see "Setting parental control levels" on page 21.</li> <li>Make sure that the channels are not hidden. For more information, see "Hiding and adding channels" on page 18.</li> <li>The channel may have been deleted from the channel list. You can tune to the channel by pressing the number buttons or you can add the channel back to the channel list. For more information, see "Changing channel settings" on page 18.</li> </ul>
Password is lost.	<ul style="list-style-type: none"> <li>Enter <b>9999</b> to access the parental controls, then set a new password. For more information, see "Setting parental controls" on page 20.</li> </ul>
Some settings cannot be accessed.	<ul style="list-style-type: none"> <li>If a setting is grayed, the setting is not available in the current video input mode.</li> </ul>
TV cabinet creaks.	<ul style="list-style-type: none"> <li>When the TV is in use, the temperature rises naturally and may cause the cabinet to expand or contract which can cause a creaking noise. This is not a malfunction.</li> </ul>
Control buttons on the TV do not work.	<ul style="list-style-type: none"> <li>Disconnect the power cord, wait a few seconds, then reconnect the power cord and turn on the TV.</li> <li>Make sure that the <b>Button Lock</b> option is set to <b>Off</b>. For more information, see "Locking control buttons" on page 23.</li> </ul>

**Note:** If the problem is not solved by using these troubleshooting instructions, try turning off your TV, then turning it on again.

## Specifications

Specifications subject to change without notice.

Weight and dimensions shown are approximate.

<b>Analog standard</b>	NTSC
<b>Digital standard</b>	ATSC, 8-VSB, Clear-QAM
<b>Screen</b>	DX-15L150A11 - 15" DX-19L150A11 - 19" DX-22L150A11 - 22"
<b>Channel coverage</b>	VHF: 2 - 13 UHF: 14 - 69 CATV: Mid band - A8~A-1,A~I Super band - J~W Hyper band - AA~ZZ, AAA, BBB Ultra band: 65~94, 100~135
<b>Power source</b>	AC 120 V ~ 60 Hz
<b>Power consumption</b>	15" - 42 W with TV on 19" - 45 W with TV on 22" - 62 W with TV on <1 W in standby mode
<b>Audio power</b>	3 W + 3 W internal speaker
<b>S-Video input</b>	Y: 1 V (p-p), 75 ohm, negative sync C: 0.286 V (p-p) (burst signal), 75 ohm
<b>Video/audio input</b>	Video: 1 V (p-p), 75 ohm, negative sync Audio 500mV (rms)
<b>Component input</b>	Y: 1 V (p-p), 75 ohm, including sync PR/CR: $\pm 0.35$ V (p-p), 75 ohm PB/CB: $\pm 0.35$ V (p-p), 75 ohm Audio: 500 mV (rms) Suggested resolutions: 1080i, 720p, 480p, 480i
<b>HDMI input</b>	1 HDMI input jack HDCP compliant E-EDID compliant Suggested scan rates: 1080p, 1080i, 720p, 480p, 480i
<b>VGA input</b>	E-EDID compliant Suggested scan rates: 640x480/60 Hz, 800x600/60 Hz, 1024x768/60 Hz, 1360x768/60 Hz Audio input: Mini-jack for stereo

## Maintenance

- Do not use your TV in areas that are too hot or too cold, because the cabinet may warp or the screen may malfunction. Your TV works best in temperatures that are comfortable to you.
- Storage temperatures are 32° to 122°F (0° to 50°C).
- Working temperatures are 41° to 104°F (5° to 40°C).
- Do not place your TV in direct sunlight or near a heat source.

### Cleaning the TV cabinet

Clean the cabinet with a soft, lint-free cloth. If the cabinet is especially dirty, moisten a soft, lint-free cloth in a weak detergent solution, squeeze the excess moisture from the cloth, then wipe the screen or cabinet with the cloth. Use a clean cloth to dry the screen or cabinet.

### Cleaning the TV screen

Clean the screen with a soft, lint-free cloth.

## Legal notices

### FCC Part 15

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply within the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.

**FCC warning**

Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.

**Cables**

Connections to this device must be made with shielded cables with metallic RF/EMI connector hoods to maintain compliance with FCC Rules and Regulations.

**Canada ICES-003 statement**

This Class B digital apparatus complies with Canadian ICES-003.  
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.  
Standard Television Receiving Apparatus — Appareil de réception télévision ordinaire, Canada BETS-7 / NTMR-7

**Dolby License Notice and Trademark Acknowledgement**

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

**HDMI**

HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

**Energy Star**

Please keep the factory default settings as shipped, in which the product can meet Energy Star requirements

# One-year limited warranty

## US and Canada Markets

### Definitions:

Dynex Products ("Dynex") warrants to you, the original purchaser of this new Dynex-branded television ("Product"), that the Product shall be free of defects in the original manufacturer of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period"). For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy or Future Shop authorized dealer of Dynex brand products only that are packaged with this warranty statement.

### How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

### What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Dynex repair center or store personnel, Dynex will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Dynex and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Dynex Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

### How to obtain warranty service?

If you purchased the Product at a Best Buy or Future Shop retail store location and your television Product has a screen size of less than 37 inches, please take your original receipt and the Product to any Best Buy or Future Shop store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased the Product from a Best Buy or Future Shop online web site, mail your original receipt and the Product to the address listed on the web site. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. To obtain in-home warranty service for a television with a screen 37 inches or larger, in the United States call 1-888-BESTBUY, Canada call 1-866-BESTBUY for Future Shop call 1-800-663-2275. Call agents will diagnose and correct the issue over the phone or will have a Dynex-approved repair technician dispatched to your home.

### Where is the warranty valid?

This warranty is valid only to the original purchaser of the product in the United States and Canada at Best Buy or Future Shop branded retail stores or websites.

### What does the warranty not cover?

This warranty does not cover:

- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to acts of God, such as power surges
- Accident(s)
- Misuse
- Abuse
- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna
- Plasma display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Dynex to service the Product
- Products sold "as is" or "with all faults"
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. DYNEX SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. DYNEX PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Dynex:

For customer service please call 1-800-305-2204

www.Dynexproducts.com

Distributed by Best Buy Purchasing, LLC

7601 Penn Avenue South, Richfield, Minnesota, U.S.A. 55423-3645

© 2009 BBY Solutions, Inc.

All rights reserved. DYNEX is a trademark of BBY Solutions, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.

## Mexico Market

{RETAILER SEAL}

PLACE STICKER OF PRODUCT MAKE & MODEL HERE

DATE OF PURCHASE: \_\_\_\_\_

### Definitions:

Dynex Products ("Dynex") warrants to you, the original purchaser of this new Dynex-branded television ("Product"), that the Product shall be free of defects in the original manufacturer of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period"). For this warranty to apply, your Product must be purchased in Mexico from a Best Buy authorized dealer of Dynex brand products only that are packaged with this warranty statement.

### How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

### What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Dynex repair center or store personnel, Dynex will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Dynex and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Dynex Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

### How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location and your television Product has a screen size of less than 37 inches, please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased the Product from a Best Buy online web site, mail your original receipt and the Product to the address listed on the web site. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain in-home warranty service for a television with a screen 37 inches or larger, in Mexico call 01 800-433-5778. Call agents will diagnose and correct the issue over the phone or will have a Dynex-approved repair technician dispatched to your home.

### Where is the warranty valid?

This warranty is valid only to the original purchaser of the product in Mexico at a Best Buy branded retail stores or website.



**What does the warranty not cover?**

This warranty does not cover:

- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to acts of God, such as power surges
- Accident(s)
- Misuse
- Abuse
- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna
- Plasma display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Dynex to service the Product
- Products sold "as is" or "with all faults"
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. DYNEX SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. DYNEX PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Dynex:

For service, please call 01 800-926-3020

[www.dynexproducts.com](http://www.dynexproducts.com)

Distributed by Best Buy Imports, S. de R.L. de C.V.

Av. Santa Fe 485, Segundo Piso,

Colonia Cruz Manca,

Programa Parcial de Desarrollo Santa Fe,

Delegación Cuajimalpa, Distrito

Federal, México 05349

RFC#BBIO802114Q2

© 2009 BBY Solutions, Inc.

All rights reserved. DYNEX is a trademark of BBY Solutions, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.



# DYNEX™

If the power cord has been damaged, it should be replaced by the manufacturer, your service provider or qualified personnel to avoid risks.

Si el cordón de alimentación es dañado, este debe ser remplazado por el fabricante o su agente de servicio o por personal calificado para evitar el riesgo.

[www.dynexproducts.com](http://www.dynexproducts.com)

US and Canada Market - (800) 305-2204

Mexico Market - 01 800-926-3020

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave. South, Richfield, MN 55423 U.S.A.

© 2009 BBY Solutions, Inc. All rights reserved.

DYNEX is a trademark of BBY Solutions, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.

Best Buy Imports, S. de R.L. de C.V. Av. Santa Fe 485, Segundo Piso, Colonia Cruz Manca, Programa Parcial de Desarrollo Santa Fe, Delegación Cuajimalpa, Distrito Federal, México 05349

RFC#BBI0802114Q2

09-1036  
ENGLISH

Se incluye el manual. Favor de leer este manual antes de usar el producto.

Para el Soporte técnico de Dynex en México,

favor llame al: 01 800-926-3020 <http://www.dynexproducts.com>

